13.99

200CD
WIDE RANGE OSCILLATOR

OPERATING AND SERVICE MANUAL

HEWLETT hp PACKARD

HP 200CD

HEWLETT hp PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

OPERATING AND SERVICE MANUAL

(HP PART NO. 200CD-903)

MODEL 200CD/CDR
WIDE RANGE OSCILLATOR

SERIALS PREFIXED: 605-

Appendix C, Manual Backdating Changes, adapts this manual to serials prefixed: 333-, 229-, 212-, 129-, and 103-, 005- and serials 22549 thru 1.

Copyright Hewlett-Packard Company 1955
P. O. Box 301 Loveland, Colorado U. S. A.

00084-6

Printed: NOV 1965

TABLE OF CONTENTS

Section		Page
I	GENERAL INFORMATION	1-1
1-1.	Description	1-1
1-6.	Differences Between Instruments	1-1
1-8.	Backdating Sheet	1-1
II	PREPARATION FOR USE	2-1
2-1.	Introduction	2-1
2-3.	Unpacking and Inspection	2-1
2-6.	Power Requirements	2-1
2-8.	Power Cable	2-1
2-11.	230-Volt Operation	2-1
2-13.	Repacking for Shipment	2-1
III	OPERATING INSTRUCTIONS	3-1
3-1.	Introduction	3-1
3-3.	Operation	3-1
IV	THEORY OF OPERATION	4-1
4-1.	General	4-1
4-4.	Frequency-Controlling Bridge	4-1
4-9.	Amplifier	4-1
4-11.	Output Circuit	4-1
V	MAINTENANCE	5-1
5-1.	Introduction	5-1
5-3.	Periodic Maintenance	5-1
5-5.	Test Equipment	5-2
5-7.	Troubleshooting	5-2
V	MAINTENANCE (Cont'd)	
5-9.	Amplifier Power Supply	5-2
5-11.	Repair and Replacement	5-2
5-12.	Cabinet Removal	5-2
5-14.	Servicing Etched Circuit Boards	5-3
5-16.	Tube Replacement	5-3
5-18.	Replacement of Lamps, RT1 and RT2	5-4
5-20.	Tuning Capacitor Repair	5-4
5-22.	Range Switch Repair	5-4
5-24.	Adjustments	5-4
5-26.	Preliminary Checks	5-4
5-31.	Calibration	5-4
5-37.	Distortion	5-7
5-38.	Output Voltage	5-7
5-39.	Performance Check	5-7
5-41.	Output Impedance	5-7
5-42.	Frequency Response	5-7
5-43.	Dial Accuracy	5-7
5-44.	Distortion	5-8
VI	REPLACEABLE PARTS	6-1
6-1.	Introduction	6-1
6-4.	Ordering Information	6-1
6-7.	Non-Listed Parts	6-1

APPENDIX

A CODE LIST OF MANUFACTURERS

B SALES AND SERVICE OFFICES

C MANUAL BACKDATING CHANGES

LIST OF ILLUSTRATIONS

Figure		Page
1-1.	Model 200CD Wide Range Oscillator	1-1
3-1.	Controls and Terminals	3-0
3-2.	Typical Output Connections	3-1
3-3.	Balance Chart Operating Into 600-Ohm Load	3-1
4-1.	Model 200CD Block Diagram	4-0
5-1.	Left Side View Model 200CD	5-1
5-2.	Right Side View Model 200CD	5-3
5-3.	Range Switch Detail	5-5
5-4.	Calibration Test Setup	5-6
5-5.	Alternate Calibration Setup	5-6
5-6.	Distortion Test Setup	5-7
5-7.	Bottom View Model 200CD	5-8
5-8.	Model 200CD Voltage and Resistance Diagram	5-9
5-9.	Model 200CD Schematic Diagram	5-10

LIST OF TABLES

Table		Page
1-1.	Specifications	1-0
5-1.	Test Instruments Required	5-0
5-2.	Troubleshooting	5-2
5-3.	Tube Replacement List	5-3
5-4.	Frequency/Period Conversion	5-6
5-5.	Distortion Test Frequencies	5-8
6-1.	Reference Designation Index	6-2
6-2.	Replaceable Parts	6-5

Table 1-1. Specifications

FREQUENCY RANGE:	5 cps to 600 kc covered in five ranges
RANGES:	X1 5 cps to 60 cps X10 50 cps to 600 cps X100 500 cps to 6 kc X1000 5 kc to 60 kc X10000 50 kc to 600 kc
ACCURACY:	±2% including calibration error, warmup, changes due to aging of components, tubes, etc
DIAL:	6-inch diameter calibrated over 300° of arc. 85 divisions. Total scale length, 78 inches
FREQUENCY RESPONSE:	±1 db entire frequency range (reference 1 kc)
OUTPUT:	160 milliwatts (10 volts) into 600-ohm rated load, 20 volts open circuit
OUTPUT BALANCE:	Better than 0.1% at lower frequencies and approximately 1% at higher frequencies
INTERNAL IMPEDANCE:	600 ohms. Output is balanced to ground for zero attenuation. (May be operated with one side grounded if desired.)
DISTORTION:	0.2% from 20 cps to 200 kc; 0.5% from 5 cps to 20 cps and from 200 kc to 600 kc
HUM VOLTAGE:	Less than 0.1% of rated output; decreases as output is attenuated
POWER:	115/230 volts ±10%, 50-1000 cps, 90 watts
ACCESSORIES AVAILABLE:	hp 11004A Line Matching Transformer (provides balanced output at any attenuator setting at 135 and 600 ohms) hp 11000A Cable Assembly, 44 in. long, terminated each end with dual banana plugs hp 11001A Cable Assembly, 45 in. long, with one dual banana plug and one BNC male connector
DIMENSIONS:	Cabinet Mount: 7-3/8 in. wide, 11-1/2 in. high, 14-3/8 in. deep. (187, 3 x 292, 1 x 365, 1 mm) Rack Mount: 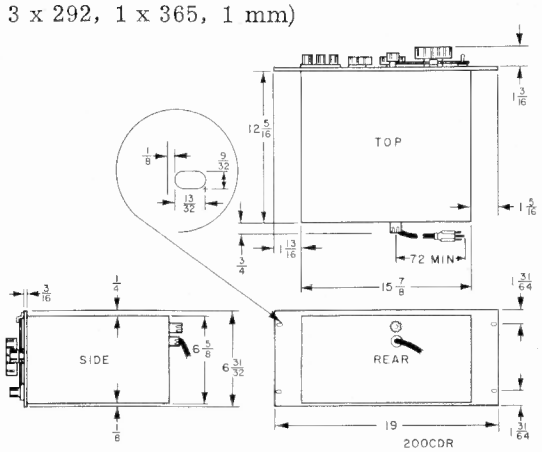
WEIGHT:	Cabinet Mount: Net, 22 lbs. (9,9 kg). Shipping, 27 lbs. (12, 2 Kg). Rack Mount: Net, 27 lbs. (12, 2 kg). Shipping, 37 lbs. (16.7 kg).

SECTION I
GENERAL INFORMATION

1-1. DESCRIPTION.

1-2. The Model 200CD Wide Range Oscillator generates frequencies of excellent waveform in the subsonic, audio, and ultrasonic ranges (5 cycles to 600 kc, in five overlapping decade bands). The Model 200CD includes new design features which result in still finer performance than previous Hewlett-Packard instruments. Special circuitry ensures an output voltage of low distortion and high stability with any output load impedance from zero ohms to open circuit. Usefulness of the oscillator has been extended by designing the 200CD output circuit so that the instrument may be operated balanced as well as unbalanced and by providing a 600-ohm impedance match.

1-3. The Model 200CD is easy to operate: frequency and amplitude of the output voltage are set merely by operating dials on the control panel. The easily-read, 6-inch diameter frequency dial is calibrated over 300° of arc, and has an effective scale length of approximately 80 inches.

1-4. The Model 200CD furnishes up to 10 volts into a 600-ohm load (20 volts open circuit) at any frequency from 5 cps to 600 kc. A bridged tee variable attenuator in the output circuit controls the output power.

1-5. The Model 200CD provides an ideal signal source for testing servo and vibrating systems, medical and geophysical equipment, audio amplifier circuits and transducers, sonar and supersonic apparatus, carrier telephone systems, video frequency circuits, and low radio-frequency equipment.

1-6. DIFFERENCES BETWEEN INSTRUMENTS.

1-7. Hewlett-Packard uses a two-section eight-digit serial number (000-00000). If the first three digits of the serial number on your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define differences between your instrument and the Model 200CD described in this manual.

1-8. BACKDATING SHEET.

1-9. A backdating sheet that makes this manual applicable for instruments with serial prefixes to 103, is provided in The Appendix of this manual.

Figure 1-1. Model 200CD Wide Range Oscillator

NOTES

SECTION II
PREPARATION FOR USE

2-1. INTRODUCTION.

2-2. This section contains information on unpacking, inspection, repacking, and installation of Model 200CD.

2-3. UNPACKING AND INSPECTION.

2-4. Unpack the instrument upon receipt and inspect it for signs of physical damage such as a scratched panel surfaces, broken knobs, etc. If there is any apparent damage, file a claim with the carrier and refer to the warranty page in this manual.

2-5. An electrical inspection should be performed as soon as possible after receipt. To aid in electrical inspection a list of performance checks are given in section V, paragraph 5-39. These procedures make a good test as part of incoming quality-control inspection.

2-6. POWER REQUIREMENTS.

2-7. The Model 200CD requires a power source of 115/230 volts +10%, 50/1000 cps, 75 watts.

2-8. POWER CABLE.

2-9. This Hewlett-Packard instrument is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power cable three-prong connector is the ground pin.

2-10. To preserve the protection feature when operating instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the pigtail on the adapter to ground.

2-11. 230-VOLT OPERATION.

2-12. The Model 200CD is normally wired for operation from a nominal 115-volt supply. Operation from a 230-volt source is easily accomplished by reconnecting the dual 115-volt primary windings of the power transformer from a parallel configuration to a series configuration. (See figure 5-9). At the time of the change, replace the 1.25 amp, slow-blow line fuse with a 0.6 amp, slow-blow line fuse.

2-13. REPACKING FOR SHIPMENT.

2-14. The following list is a general guide for repackaging an instrument for shipment. If you have any questions, contact your authorized Hewlett-Packard sales and service office. See map in Appendix.

a. If possible, use the original container designed for the instrument.

b. Wrap the instrument in heavy paper or plastic before placing it in the shipping container.

c. Use plenty of packing material around all sides of the instrument and protect the panel with cardboard strips.

d. Use heavy cardboard carton or wooden box to house the instrument and use heavy tape or metal bands to seal the container.

e. Mark the packing box with "Fragile", "Delicate Instrument," etc.

Note

If the instrument is to be shipped to Hewlett-Packard Company for service or repair, attach to the instrument a tag identifying the owner and indicating the service or repair to be accomplished. In any correspondence be sure to identify the instrument by model number, serial prefix, and serial number.

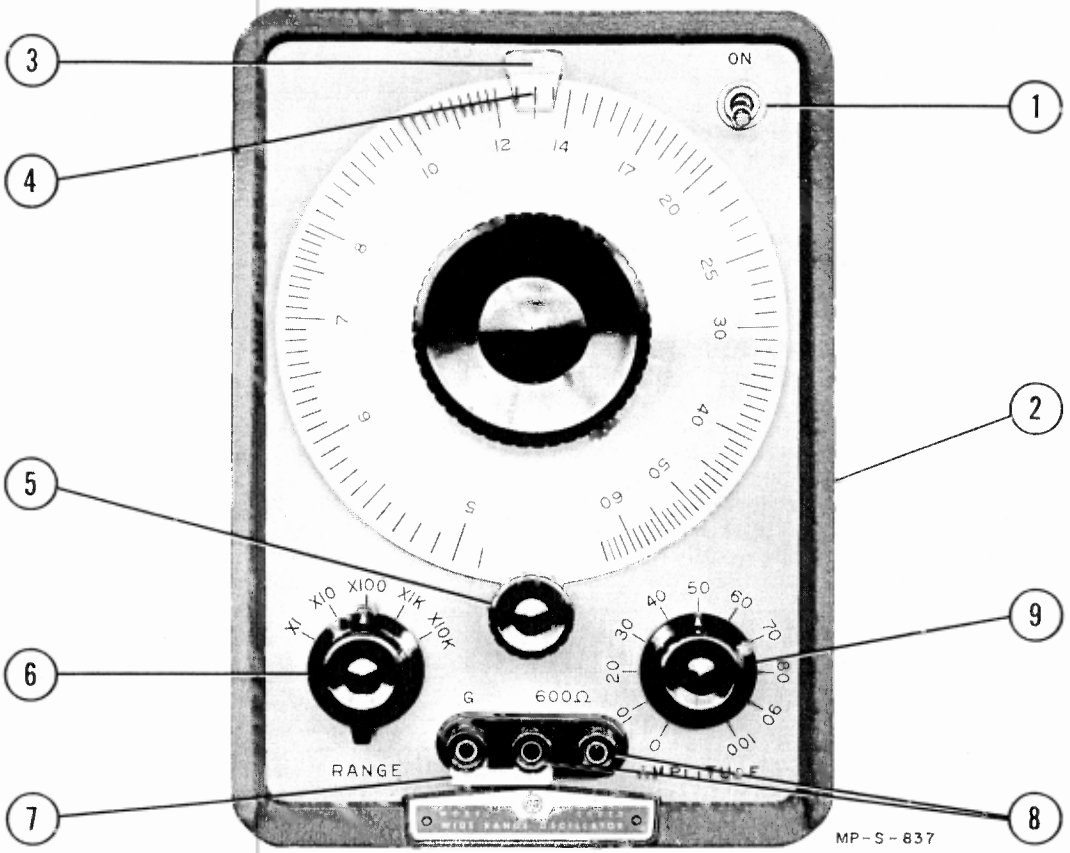

1. Turn on power to instrument.
2. Fuse on rear of instrument.
3. Glows when instrument is energized.
4. Read frequency of operation multiplied by RANGE switch position.
5. Vernier, adjust frequency.
6. Select frequency range of operation.
7. Jumper for 600 ohm unbalanced output.
8. Balanced output terminals internal impedance equals 600 ohms.
9. Adjust output voltage level. Output balanced to ground only with amplitude control in full clockwise position.

Figure 3-1. Controls and Terminals

SECTION III
OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains operating instructions for the Model 200CD Wide Range Oscillator. Figure 3-1 gives basic operating instructions. The remainder of this section supplements these instructions.

3-3. OPERATION.

3-4. ON. The oscillator is ready for use as received from the factory and will give specified performance after a short warmup period. Turn oscillator on and allow approximately five minutes to warm up. Where maximum accuracy is desired, this warm-up period should be extended to at least thirty minutes.

3-5. RANGE. The RANGE is selected with the five position RANGE switch. The position of this switch indicates the multiplying factor for the frequency dial calibration.

3-6. FREQUENCY dial. The frequency dial varies the frequency between the RANGE switch steps. The dial is calibrated from 5 to 60 and its indication multiplied by the factor indicated by the RANGE switch will give the actual output frequency of the oscillator. The small knob below the frequency dial is a vernier control for the dial.

3-7. OUTPUT CIRCUIT OPTIONS. The output circuit of the Model 200CD may be arranged for balanced or unbalanced operation. Typical connections for each are indicated in figure 3-2.

a. Unbalanced Operation. To operate with side grounded, a strap is placed between the G terminal, as indicated in figure 3-2A.

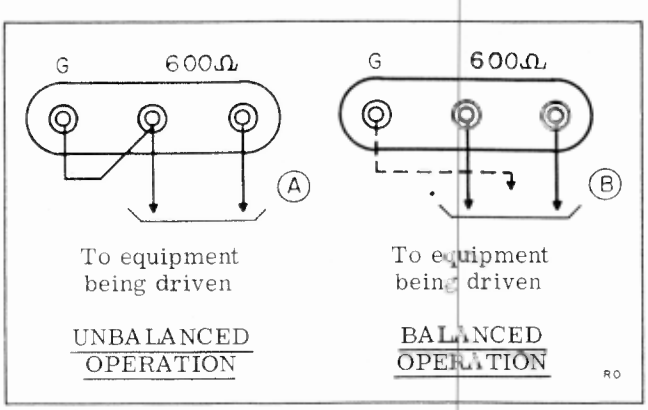

Figure 3-2. Typical Output Connections

b. Balanced Operation. Connections for balanced operation are indicated in figure 3-2B. (The broken line from the ground terminal indicates the output circuit is balanced to ground, within the tolerances given below.)

3-8. The AMPLITUDE control in the output circuit is a bridged-T attenuator and at any setting except minimum attenuation unbalances the circuit. Therefore, for balanced operation the AMPLITUDE control must be set for maximum output (full clockwise). Output balance also is a function of frequency because of capacitive feed-through at higher frequencies. Up to 10 kc, however, unbalance is less than 0.1%, and at 600 kc is approximately 1%. If small outputs are desired, or if balance at higher frequencies is critical, turn the AMPLITUDE control maximum clockwise, and connect an external attenuator, designed for the frequencies involved, between the Model 200CD and the load.

3-9. A balanced output may also be obtained over the full range of the AMPLITUDE control by using an HP AC-60A/B Line Matching Transformer at the output terminals of the oscillator.

3-10. The following chart indicates the area where within 1% of balance may be obtained. This chart indicates balance obtainable at various settings of the AMPLITUDE control when operating into a 600-ohm load. Where other values of load are used, the chart does not apply directly but does apply for settings of the AMPLITUDE control that would produce the indicated voltage across at 600-ohm load.

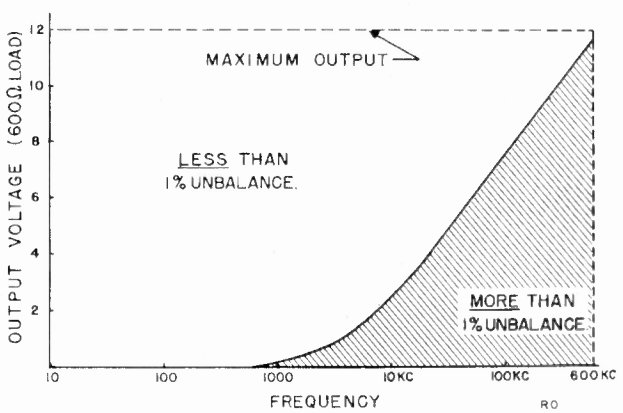

Figure 3-3. Balance Chart Operating into 600-ohm Load

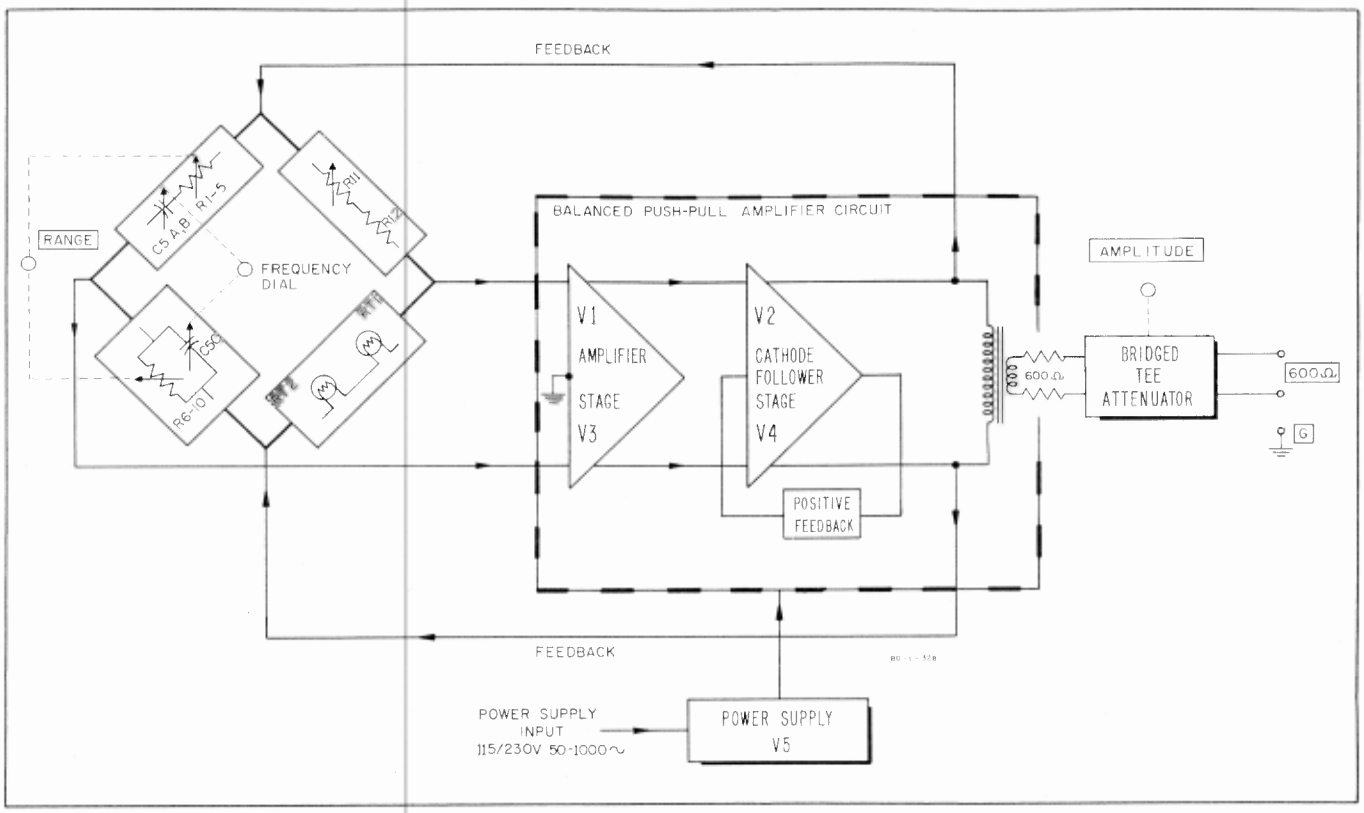

Figure 4-1. Model 200CD Block Diagram

SECTION IV

THEORY OF OPERATION

4-1. GENERAL.

4-2. The Model 200CD Wide Range Oscillator uses a balanced (push-pull) oscillator circuit from which the output is taken directly, avoiding the complication and possible distortion of an isolating amplifier. Reaction of the load on the oscillator is avoided by the use of a zero source impedance output stage. This arrangement results in a simple, trouble-free circuit having low distortion and high stability over the entire frequency range.

4-3. Functionally, the circuits of the Model 200CD include a frequency-controlling bridge and balanced push-pull amplifier which constitute the oscillator circuit, an output circuit which may be arranged either for balanced or unbalanced operation, and a power-supply circuit. These are shown in block diagram form in figure 4-1 and in detail in the schematic diagram.

4-4. FREQUENCY-CONTROLLING BRIDGE.

4-5. The frequency-controlling circuit is arranged as a floating bridge, symmetrical with respect to ground. With no connection to ground on any terminal of the bridge, stability of calibration is assured since any stray capacity or leakage to ground present at the bridge output terminals does not shunt either the frequency-controlling or amplitude-stabilizing arms of the bridge. The frequency-controlling components (RC networks which are varied by operation of the RANGE switch and frequency dial) comprise two arms of the bridge, while the amplitude-stabilizing components (a voltage divider which includes a thermally-sensitive resistance) comprise the other two arms. The amplitude is stabilized at such a level that the amplifier tubes are operated in the substantially linear portion of their characteristics, which, together with the large negative feedback at harmonic frequencies, results in a very pure sine wave oscillation.

4-6. The bridge is fed by the balanced voltage developed at the cathodes of V2 and V4 in the output of the balanced amplifier. The output of the frequency-controlling branch of the bridge is applied to the grid of V3 and the output of the amplitude-stabilizing branch is applied to the grid of V1. The manner in which the voltage-versus-frequency and phase-versus-frequency characteristics of an RC network can be utilized with an amplifier of proper design to achieve an oscillator which delivers a voltage of excellent stability and waveform is well covered in texts such as Terman & Pettit's Electronic Measurements.

4-7. Variable resistor R11 is provided for adjustment of the amplitude-stabilizing branch of the bridge should it be found after replacement of lamp RT1 or RT2 that less or more than rated voltage is being delivered to the output terminals.

4-8. Variable capacitors C3, C6, and C7 are adjusted at the factory for optimum calibration and amplitude constancy with frequency. They should not require adjustment unless the RANGE switch is replaced.

4-9. AMPLIFIER.

4-10. The oscillator amplifier is a balanced push-pull circuit including a voltage-amplifier stage (V1, V3) and a special cathode-follower stage (V2, V4). Criss-cross positive feedback is used in the cathode-follower stage to provide an essentially zero output impedance as seen by the cathode-to-cathode load. The feedback paths are from the plate of V2 to the control grid and screen of V4, and from the plate of V4 to the control grid and screen of V2. The degree of the positive feedback is a function of the load and increases as the load impedance decreases, thus tending to maintain the output constant regardless of load. Self-oscillation in the amplifier circuit is prevented by proper choice of resistance in the feedback circuits and by controlling plate and cathode impedances over the entire frequency range of the oscillator. The output stage is protected against a cathode-to-cathode short circuit by the resistors in series with the transformer secondaries. These resistors also make the oscillator present a 600-ohm impedance to the attenuator.

4-11. OUTPUT CIRCUIT.

4-12. Transformer coupling provides isolation between the oscillator circuit and the output circuit, and allows the output to be obtained either balanced or unbalanced. Since a single transformer will operate suitably over only a part of the frequency range covered 200CD, two transformers are provided. Connections between cathode-followers V2 and V4 and the proper transformer for the band in use are set up by the RANGE switch. The secondary windings of the coupling transformers supply a conventional bridged tee attenuator, the setting of which is adjusted by operation of the AMPLITUDE control on the front panel. As the control is turned counterclockwise, the loss inserted by the attenuator is increased. The source impedance at the output terminals is 600 ohms.

4-13. With attenuator set for minimum loss, the output circuit is arranged for balanced operation, and is so designed that for frequencies up to 10 kc, stray capacity and leakage resistance will cause less than 0.1% unbalance. Unbalance at 600 kc is approximately 1%.

4-14. When it is desired to operate unbalanced, ground should be connected to the center output terminal, the termination for the connection brought out from terminal 6 of output transformers T1 and T2. Proper operation cannot be obtained if the ground is connected to the side of the circuit which includes the attenuator.

Table 5-1. Test Instruments Required

Instrument Type	Minimum Required Specifications	Recommended (hp) Instruments
DC Electronic Voltmeter	Sensitivity: 1 volt full scale minimum Input resistance: 10 megohms or higher	Model 410B or 412A Vacuum Tube Voltmeter
AC Transistor Voltmeter	Input impedance: 2 megohms shunted by 40 pf (below the 0.3 volt range) Accuracy: ±3% from 5 cps to 500 kc	Model 403A Transistor Voltmeter
AC Electronic Voltmeter	Input impedance: 10 megohms shunted by 25 pf (below the 0.3 volt range) Accuracy: ±2% from 20 cps to 1 mc	Model 400D/H/L Vacuum Tube Voltmeter
Distortion Analyzer	Distortion measurement range: 5 cps to 600 kc Sensitivity: 54 db down from rated output	Model 331A or Model 330B (20 kc max range) Distortion Analyzer
600-ohm Resistor	600 ohms ±1% to 100 kc	Model 470E Shunt Resistor
Electronic Counter	Frequency and period readings available. Frequency measuring capabilities to at least 600 kc	Models 523C/CR, D/DR or 524C/D Electronic Counters
—or—		
Frequency Standard	Frequencies available: a) 10 cps b) 100 cps c) 1 kc d) 100 kc Output voltage: 5 volts rms minimum Frequency accuracy: ±0.05%	100ER Precisions Frequency Standard
—and—		
(Optional - recommended) Oscilloscope	Frequency range: flat from 5 cps to at least 600 kc	Models 150A, 160B, 170A Oscilloscopes

SECTION V
MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains test and maintenance information for Model 200CD Wide Range Oscillator. A performance check is included (paragraph 5-39) that may be used to verify operation within published specifications. This check should be made with the instrument in its cabinet. This section also includes recommended test equipment, trouble-shooting repair and adjustment procedures.

5-3. PERIODIC MAINTENANCE.

5-4. The Model 200CD should require a minimum of maintenance, since there are few moving parts. The following procedure performed once or twice a year should insure smooth operation.

a. Put one drop of oil in each of the three oil holes on the tuning drive mechanism.

b. Place a small amount of high quality contact cleaner on the RANGE switch contacts. Rotate the switch back and forth several times.

c. Using compressed air, gently blow any accumulated dust out of the tuning capacitor plates (C5). See figure 5-1.

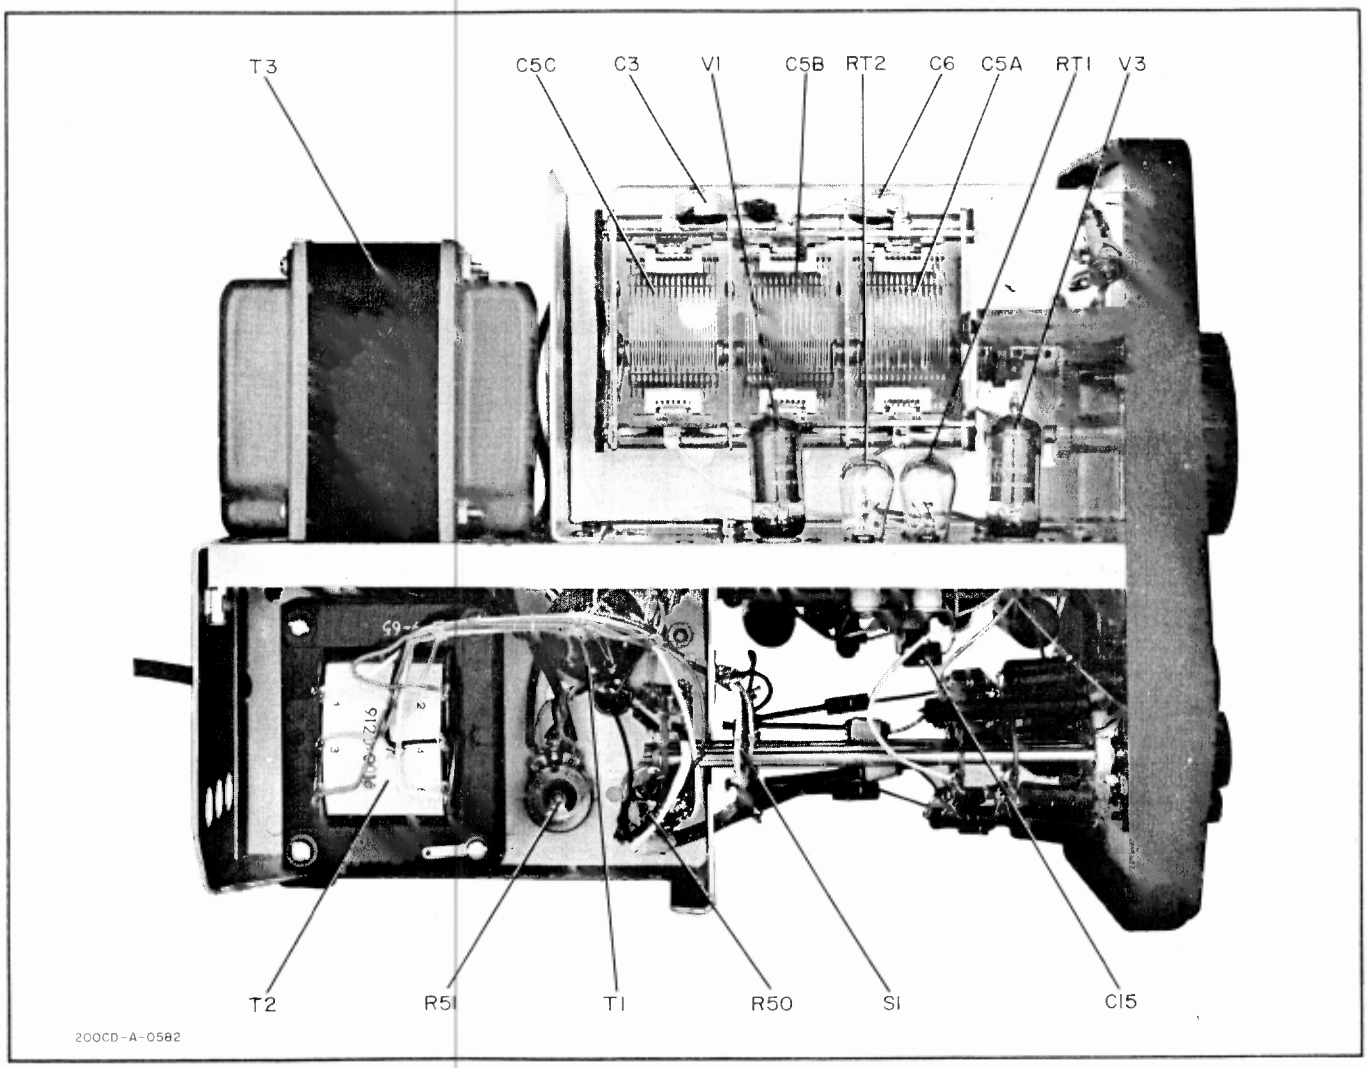

Figure 5-1. Left Side of Model 200CD (as viewed from the front)

5-5. TEST EQUIPMENT.

5-6. Table 5-1 lists the test equipment required to accurately check the Model 200CD. Equipment having similar characteristics can be substituted for the equipment listed.

5-7. TROUBLESHOOTING.

5-8. The following section gives information to aid in the localizing of troubles in the Model 200CD. In many cases a visual inspection of the instrument will reveal the area of the faulty component if not the component itself. To further assist in troubleshooting, table 5-2 and a voltage-resistance diagram, figure 5-8, have been included in this section. The troubleshooting table (5-2) gives a list of symptoms and their possible causes.

5-9. AMPLIFIER POWER SUPPLY.

5-10. Amplifier and power supply operation is best checked by voltage-resistance readings and tube substitution. If tube substitution does not correct the difficulty, return the original tube to the instrument. Voltages and resistances are indicated in figure 5-8; these are typical readings and may vary somewhat from instrument to instrument.

5-11. REPAIR AND REPLACEMENT.

5-12. CABINET REMOVAL.

5-13. To remove the Model 200CD proceed as follows:

a. Disconnect the Model 200CD from the power source.

b. Remove the two screws at the rear of the cabinet. The Model 200CDR rack mount unit has two additional screws on the front panel which must be removed.

c. Carefully slide the instrument forward, out of the cabinet.

Table 5-2. Troubleshooting

Symptom	Probable Cause
Resistance to ground less than 100K ohms	C13A, B, C leaky C14 leaky C10, 11 shorted
Tubes not glowing, pilot light out	Blown fuse F1 S2 defective
One or more tubes not glowing, pilot light on	One or more tubes burned out
Power supply voltage variation exceeds test limit	C13A, B, C or C14 breaking down under high voltage V5 defective V1-V4 shorted
Impossible to set 200CD output to 20 volts (unloaded)	V1-V4 defective RT1, RT2 defective
With RANGE set to X1-X100 ranges and output set to 20 volts rms, addition of 600-ohm termination does not lower output to 10 volts ±0.5 v	T2 defective
Same as above with RANGE set at X1K or X10K	T1 defective
Turning AMPLITUDE control causes jumpy output	R33 (AMPLITUDE control) defective
Recovery time exceeds test limit	V1, V3 defective RT1, RT2 defective
200CD obviously microphonic	V1-V4 defective RT1, RT2 defective Tuning capacitor dirty or defective
Dial springs back when turned clockwise against the stop	Tuning capacitor closed too far when fully meshed
Impossible to set low end on frequency Dial springs back when turned counterclockwise against the stop	Tuning capacitor open too far when fully meshed
Calibration bad on one range only	Dirty RANGE switch contacts C1, C2, C7, or C16 need adjusting One RANGE switch resistor has changed resistance
Excessive distortion on X1K-X10K ranges	R50 or R51 misadjusted T1 defective
Excessive distortion on X1, X10 and X100 ranges	R50 or R51 misadjusted T2 defective
Excessive distortion on all ranges	V1-V4 defective RT1-RT2 defective Dust between tuning capacitor plates
Impossible to set 11.5 v out with 200CD terminated with 600 ohms (adjustment procedure)	RT1, RT2 defective V1-V4 weak

5-14. SERVICING ETCHED CIRCUIT BOARDS.

Note

Excessive heat or pressure can lift copper conductors from etched circuit boards.

5-15. To remove components from board, clip leads on component side of board. New components can then be soldered to the leads extending from the board or the leads can be removed. If leads are removed, clean holes with a toothpick or wooden splinter (metal awls or soldering aids may destroy the copper conductor) before inserting leads.

5-16. TUBE REPLACEMENT.

5-17. Tubes used in the Model 200CD are listed in Tube Replacement List (table 5-3). If V2 or V4 are changed, replace the special tube shields in their original positions, (shown in figure 5-2).

Table 5-3. Tube Replacement List

Tube	Type	Function	Required Checks or Adjustments
V1	6AU6	Voltage Amplifier	Recheck calibration and distortion.
V2	6CW5/ EL86		Reset output voltage (paragraphs 5-24 through 5-38).
V3	6AU6	Cathode Followers	Recheck distortion (paragraph 5-37).
V4	6AU6		Reset output voltage (paragraph 5-38).

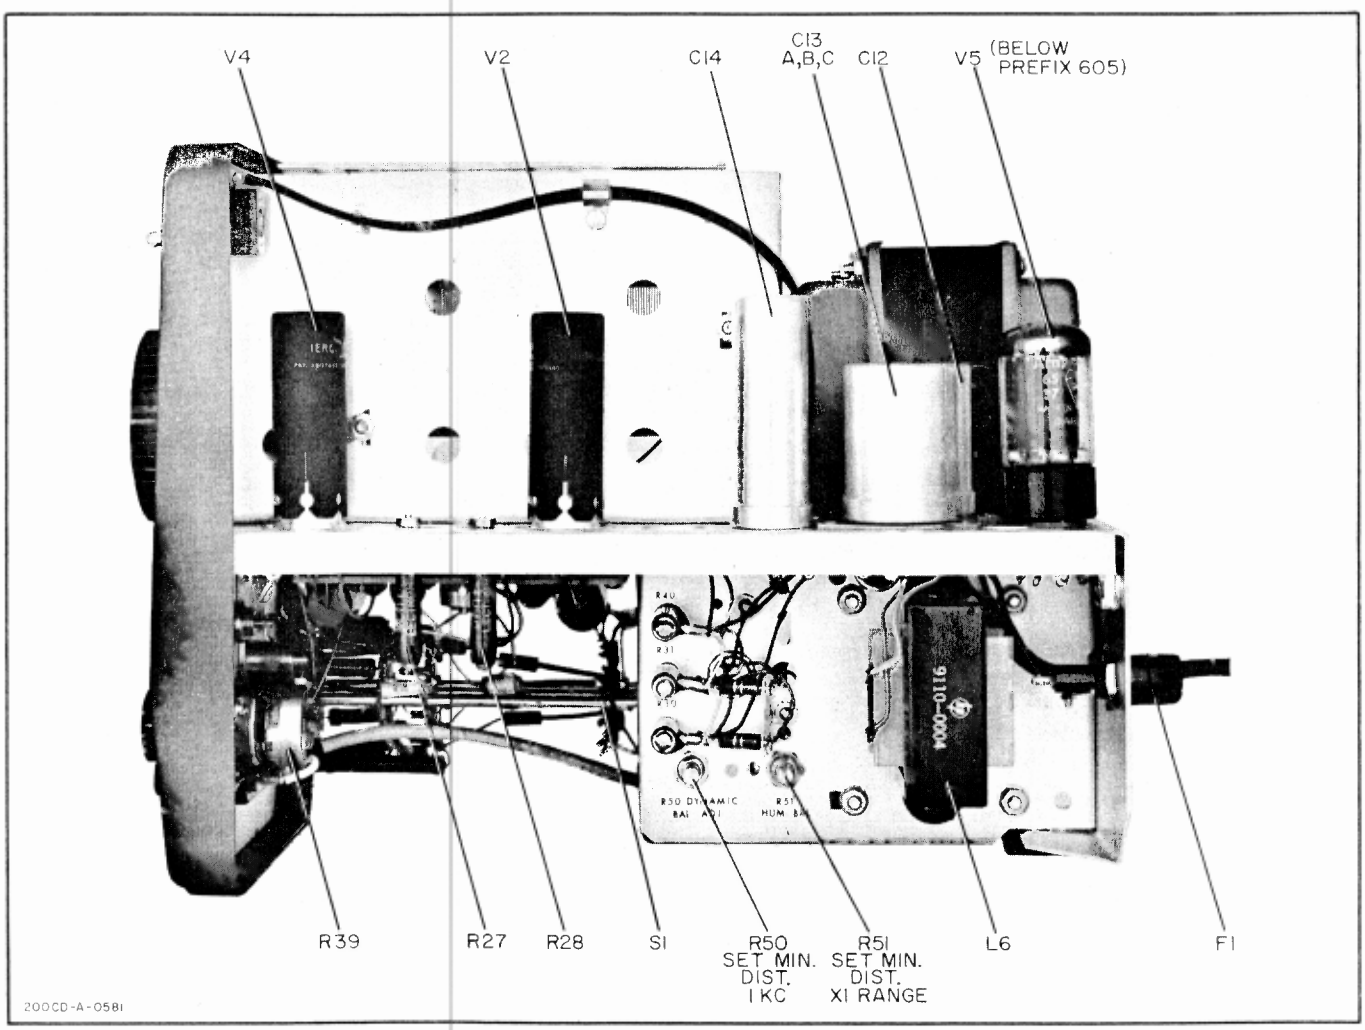

Figure 5-2. Right Side of Model 200CD (as viewed from the front)

5-18. REPLACEMENT OF LAMPS, RT1 and RT2

5-19. The amplitude stablization lamps operate well below their rating and should have a long life, unless they are damaged by severe mechanical vibration. When RT1 or RT2 (see figure 5-1) are replaced, reset output voltage (paragraph 5-38).

5-20. TUNING CAPACITOR REPAIR.

5-21. The tuning capacitor, C5 A, B, C (shown in figure 5-1), should not be loosened unless absolutely necessary, since doing so may cause misalignment of the tuning capacitor shaft with the shaft extension to the gears. If C5 A, B, C has been removed or loosened for any reason, it should be readjusted mechanically before any electrical adjustment is attempted. In some cases, due to slippage, the tuning capacitor will not mesh far enough to allow perfect calibration at the extreme low end of the dial. When correctly set, the edge of the insulation protruding from the rotor plate spacer on C5 should line up with the topmost stator spacer when the dial is set fully clockwise.

5-22. RANGE SWITCH REPAIR.

5-23. Resistor values on S1 have been carefully bridged and adjusted at the factory to the exact value required for proper tracking on all ranges. If one range is found to be badly out of calibration and all other possibilities have been exhausted (especially dirty RANGE switch contacts) try adjusting the value of C1, C2, C7 or C16 (depending on the range affected) slightly. If any part of the RANGE switch is found to be defective, it is recommended that the switch be replaced as an assembly. Figure 5-3 shows all wiring detail for replacement.

5-24. ADJUSTMENTS.

5-25. The following section is a complete adjustment procedure and should be made only if it has been definitely determined that the Model 200CD is out of adjustment.

Note

In order to minimize the effects of hand capacity, a "tuning wand" or tuning screwdriver with a plastic shank should be used for all adjustments.

5-26. PRELIMINARY CHECKS.

5-27. The following basic tests are given to avoid possible unnecessary adjustment of the Model 200CD. If the instrument fails any of these tests, some component is probably at fault and should be replaced before attempting any adjustment. Proceed as follows:

5-28. POWER SUPPLY:

a. With the instrument turned off, check the resistance from C13 to ground and the resistance across C13. This resistance is typically many megohms. A very low reading (below 100K) indicates a shorted or leaky capacitor between the B+ line and ground.

b. Turn the instrument on, and allow it to warm up for at least 15 minutes.

c. Check to see that all tubes are glowing.

d. Using an dc electronic voltmeter, measure the positive and negative power supply voltages using ground as a reference. The positive voltage (approximately 225 volts) may be measured between the chassis and C14. The negative voltage (approximately 155 volts) is measured from the chassis to the junction of R30, R31 and R40 (figure 5-2). The difference between the negative and positive voltage should be 380 volts ±75 volts.

5-29. AMPLITUDE CONTROL OPERATION:

a. With a 600-ohm load connected to the OUTPUT terminals, and the Model 200CD output connected to the ac voltmeter, set the Model 200CD RANGE to X100.

b. Turn the Model 200CD AMPLITUDE fully clockwise. If necessary adjust R11 to obtain 12 vac.

c. Now, while observing the voltmeter indication and switching to lower voltmeter ranges as necessary, slowly turn the Model 200CD AMPLITUDE fully counter clockwise. Note the voltmeter reading again. The attenuation should be smooth and the final reading should be at least 46 db below the reference in step b.

5-30. RECOVERY TIME:

a. Switch RANGE to X10 and frequency to 50 kc.

b. Connect the output of the Model 200CD to an oscilloscope.

c. Switch from range to range, observing the oscilloscope pattern after range switching.

d. The oscilloscope presentation should become stable within 5 seconds after switching ranges.

5-31. CALIBRATION.

5-32. The calibration procedure for the Model 200CD is divided into two sections. The first section, paragraph 5-33, is intended to produce a flat frequency response for the Model 200CD, and is accomplished with the instrument set on the X10 range. The second section, paragraph 5-34, is intended to produce correct frequency dial tracking and is accomplished with the instrument set on the X100 range.

5-33. FREQUENCY RESPONSE ADJUSTMENTS:

a. Turn Model 200CD RANGE to X10, frequency dial to 5.

b. Connect the Model 200CD to an ac voltmeter and a frequency measuring device (counter or frequency standard) as shown in figure 5-4.

c. Using Model 200CD AMPLITUDE, set a reference of 9 volts as read on the ac voltmeter.

d. Turn the frequency dial to 60. The ac voltmeter should read within ±1/4 db of the reference in step c and the frequency should be correct within 2%.

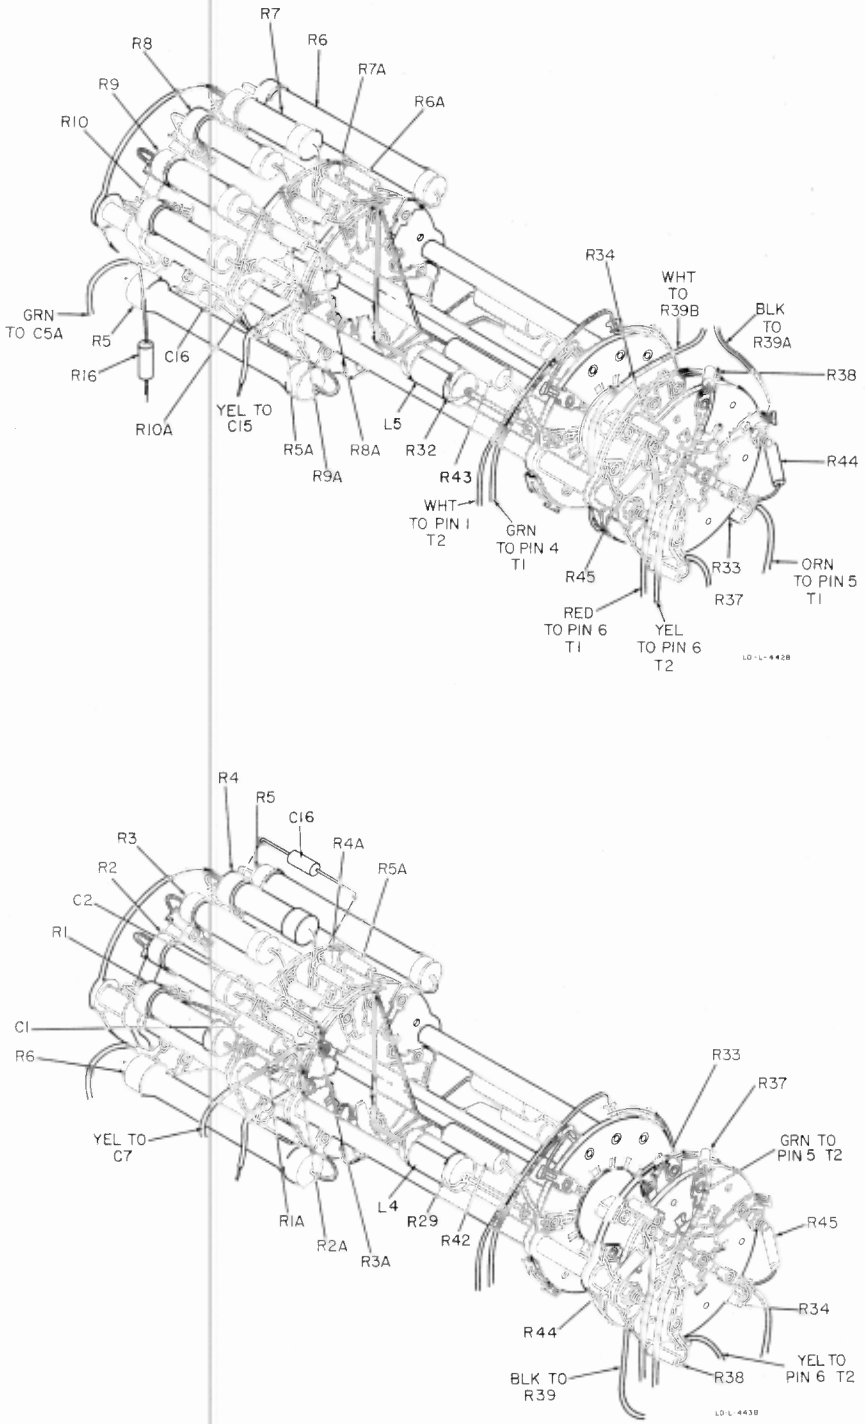

Figure 5-3. Range Switch Detail

e. If 600 cps is off more than 2%, set the frequency on with C6.

Note

Since replacing the cabinet raises the frequency slightly, it is advisable to set the frequency slightly low (e.g., 599 cps) when making this adjustment.

f. Observe the output voltage and determine how much it differs from the reference.

g. Adjust C3 to correct for half this difference. Then adjust C6 so that the output frequency is again 600 cps.

h. Observe the output voltage. If it is more than ±1/4 db from the reference in step c repeat steps c through h until a flat response is obtained with 600 cps set on frequency (see note above).

5-34. FREQUENCY DIAL TRACKING:

a. Switch Model 200CD RANGE to X100. Connect the equipment as shown in figures 5-4 or 5-5.

b. Check the frequency at 5. The frequency reading should be 500 cps ±2%. If the frequency is off more than ±2%, slip the dial to put it on frequency:

1) Remove center knob on frequency dial.

2) Loosen the four screws which secure the dial plate to the drive shaft.

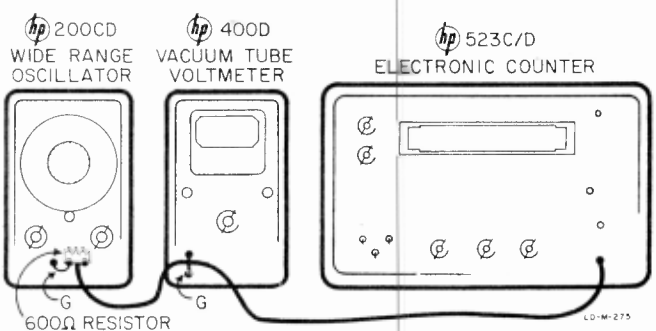

Figure 5-4. Calibration Test Setup

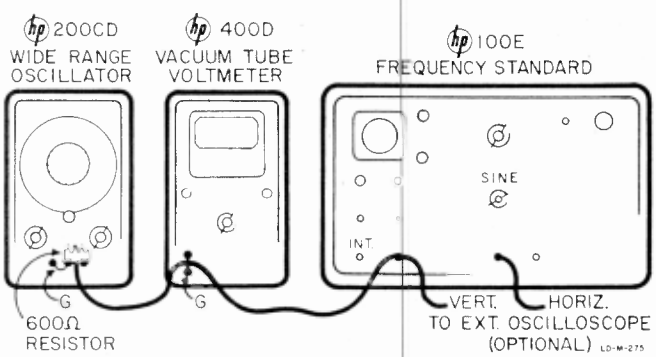

Figure 5-5. Alternate Calibration Setup

3) Reset dial to position indicated in the text.

4) Tighten the four securing screws. (Center knob may be replaced at the end of this procedure.)

c. If it was necessary to slip the dial, repeat steps a through h in paragraph 5-33.

d. If step c was necessary, repeat step b. It is possible that the entire dial will now track without further adjustment.

e. Check all numbered points on the dial, beginning at the high end. If some points exceed test limits (±2%) try to equalize the error by slipping the dial to get all points within these limits.

f. Switch RANGE to X10K, and set the Model 200CD frequency dial to 60.

g. Adjust C7 to put 600 kc on frequency.

h. Check calibration on the remaining ranges. Calibration should be correct to ±2%.

Note

It will be advantageous to set the counter FUNCTION SELECTOR to 10 PERIOD AVERAGE when measuring frequency on the X1 range (refer to table 5-4).

Table 5-4. Frequency/Period Conversion

Frequency (cps)	Frequency Limits	Period Limits
5	5.1 4.9	196.0 ms 204.0 ms
10	10.2 9.8	098.0 ms 102.0 ms
20	20.4 19.6	049.0 ms 051.0 ms
40	40.8 39.2	024.5 ms 025.5 ms
60	61.2 58.8	016.3 ms 017.0 ms

5-35. If the above procedures do not result in correct calibration, start over by adjusting C3 and/or C6 as in step a through h, paragraph 5-33. Then work toward the low end by setting the dial to the next numbered point and bending one of the outer rotor plates in each section of C5 at the point of mesh. Continue this procedure to the low end of the dial to obtain approximately correct frequencies. Repeat the bending procedure from the high end, this time making fine adjustments of frequency with the other outer rotor plates. In this way, bending of any one plate is minimized.

5-36. When bending rotor plates, observe the following precautions: 1) keep all bends as near the shaft as possible; 2) keep all segments in line. The rotor plates should taper gradually inward or outward, depending on whether you must compress or expand the

frequency range. This gradual taper is essential for linearity. 3) Bending of plates near the high frequency end should be unnecessary.

5-37. DISTORTION.

a. Connect the Model 200CD to the distortion analyzer as shown in figure 5-6.

b. Set the Model 200CD RANGE to X1 and the frequency dial to 20.

c. The distortion analyzer switches should be in the following positions:

AF - RF	AF
FREQUENCY	20
Selector switch	SET LEVEL
RMS VOLTS-DB switch	±20 db

d. Adjust distortion analyzer INPUT control for a zero db reference on the distortion analyzer meter.

e. Switch selector to DISTORTION.

f. Adjust BALANCE and FREQUENCY controls for a dip on the meter.

g. Turn RMS VOLTS-DB switch counterclockwise while continually adjusting distortion analyzer BALANCE and FREQUENCY until the lowest possible dip is obtained.

h. Adjust R50 (dynamic balance) for a dip (minimum distortion; see figure 5-2) on the distortion analyzer meter until the lowest possible dip is obtained.

Note

For optimum results use lowest frequency setting of the 200CD Wide Range Oscillator.

i. Repeat steps a through h, adjusting all distortion analyzer controls for 50 cps (60 cps if 50 cps line frequency is being used) instead of 1000 cps.

j. Adjust R51 (hum balance; see figure 5-2) instead of dynamic balance in step h.

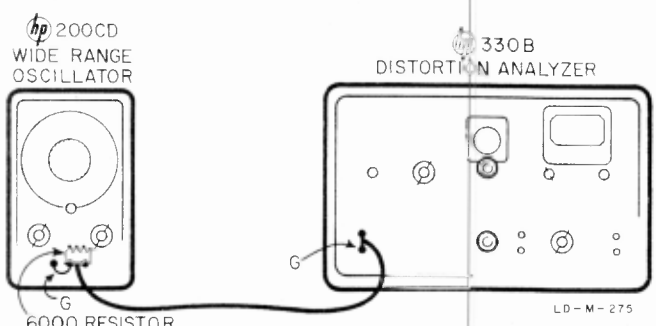

Figure 5-6. Distortion Test Setup

5-38. OUTPUT VOLTAGE

a. Connect the Model 200CD to an ac voltmeter.

b. Load the Model 200CD with a 600-ohm load resistor.

c. Turn Model 200CD AMPLITUDE fully clockwise, and adjust R11 for 11.5 volts on the ac voltmeter (see figure 5-7).

5-39. PERFORMANCE CHECK.

5-40. Proper operation of the Model 200CD is verified in the following procedure. A complete adjustment procedure is given in paragraph 5-24.

5-41. OUTPUT IMPEDANCE.

a. Set Model 200CD RANGE to X100, frequency dial to 10.

b. Connect Model 200CD output to an ac transistor voltmeter. Set the voltmeter RANGE to 30 volts.

c. Turn Model 200CD AMPLITUDE fully clockwise. The voltmeter should read at least 20 volts.

d. Set Model 200CD AMPLITUDE for exactly 20 volts as read on the voltmeter.

e. Connect a 600-ohm resistor such as the Model 470E Shunt Resistor across output of Model 200CD.

f. The voltage as read on the voltmeter should drop to 10 volts +0.5 volts.

5-42. FREQUENCY RESPONSE.

a. Connect the Model 200CD to an ac voltmeter and an electronic counter as shown in figure 5-4. Substitute an ac transistor voltmeter for the ac electronic voltmeter in figure 5-4.

b. Set Model 200CD RANGE to X100, frequency dial to 10. Terminate output with 600 ohms.

c. Adjust Model 200CD AMPLITUDE for a convenient reference around 0.9 on the voltmeter scale.

d. Starting with the X1 range, rotate the frequency dial across the band while observing the meter.

e. Repeat this process for each range. The voltmeter indication should not vary more than ±1 db throughout the ranges checked.

5-43. DIAL ACCURACY.

a. Set Model 200CD RANGE to X10K, frequency dial to 60. Observe the frequency reading on the electronic counter.

b. Check frequency at 40, 20, 10 and 5 on the dial.

c. Repeat this procedure for the remaining ranges. The frequency should be correct within ±2%.

Note

For the lower end of the X10 range and the entire X1 range, it will be advantageous to measure the frequency indirectly by switching the electronic counter FUNCTION SELECTOR to 10 PERIOD AVERAGE. Table 5-4 lists the specifications in terms of period readings for each point on the X1 range. To check X10 range, divide the period limit in table 5-4 by 10.

5-44. DISTORTION.

a. Connect the Model 200CD to a distortion analyzer as shown in figure 5-6.

b. Set Model 200CD RANGE switch and frequency dial to one of the frequencies indicated in table 5-5.

c. The distortion analyzer switches should be set to the following positions:
AF-RF . . . . . AF
FREQUENCY. .incoming frequency selected in step b
Selector switch . . . . . SET LEVEL
RMS VOLTS-DB switch . . . . . ±20 db

d. Adjust distortion analyzer INPUT control for a zero db reference on the distortion analyzer meter.

e. Switch selector to DISTORTION.

f. Adjust BALANCE and FREQUENCY controls for a dip on the meter.

g. Turn RMS VOLTS-DB switch counterclockwise while continually adjusting distortion analyzer BALANCE and FREQUENCY until the lowest possible dip is obtained. Specifications are listed in table 5-5.#

Table 5-5. Distortion Test Frequencies

Range	Frequency	Specifications
X10	100 cps	54 db
X100	1000 cps	54 db
X100	6 kc	54 db
X1K	5 kc	54 db

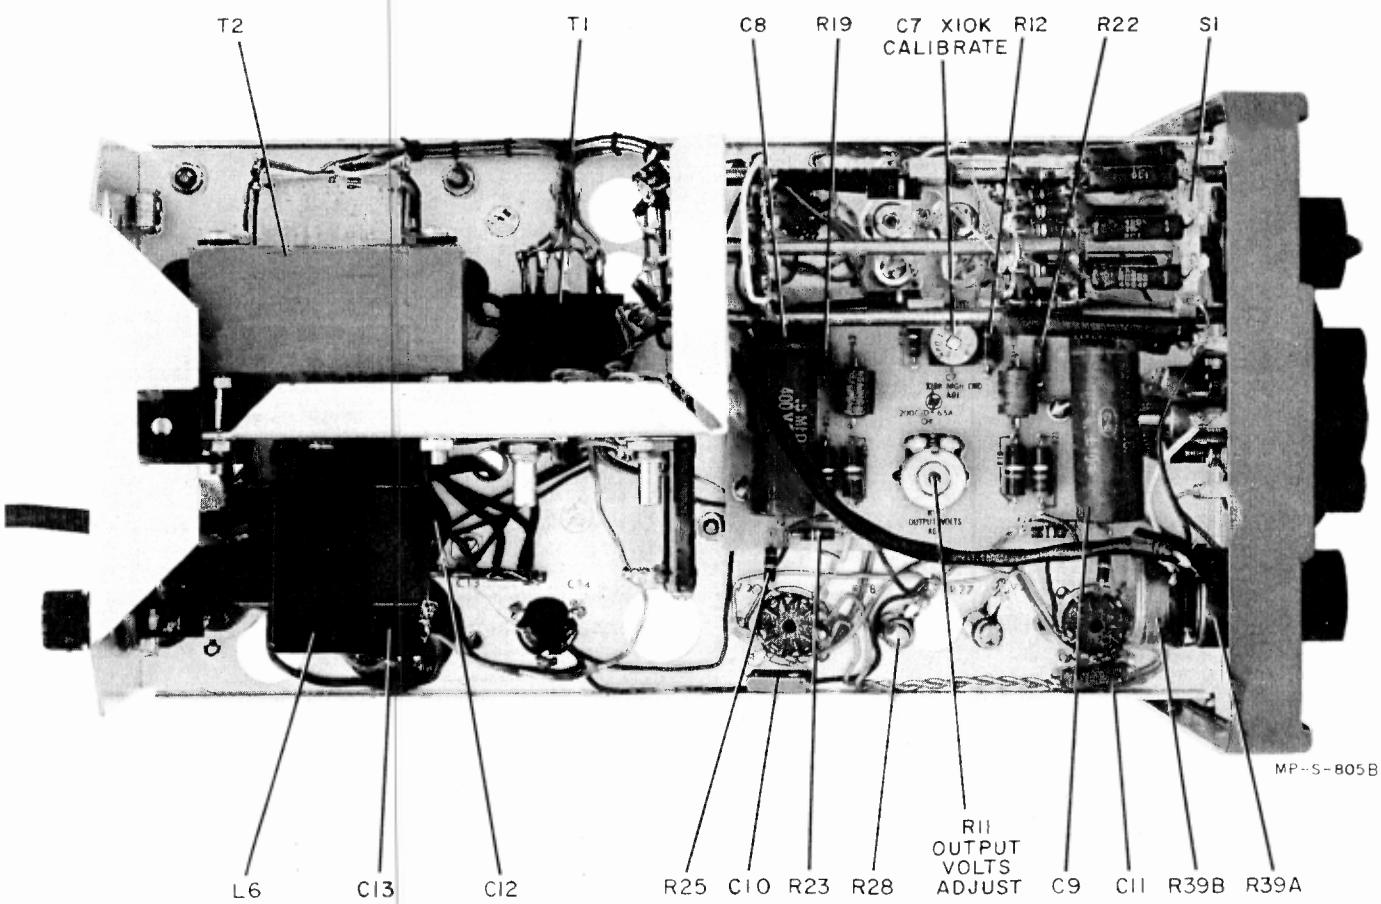

Figure 5-7. Bottom View Model 200CD

If the measurement of distortion above the frequency of 20 kc is desired, a distortion analyzer which will measure distortion to 600 kc must be used (such as Model 331A). At 500 kc and above, the distortion must be down 46 db from reference 0.5%.

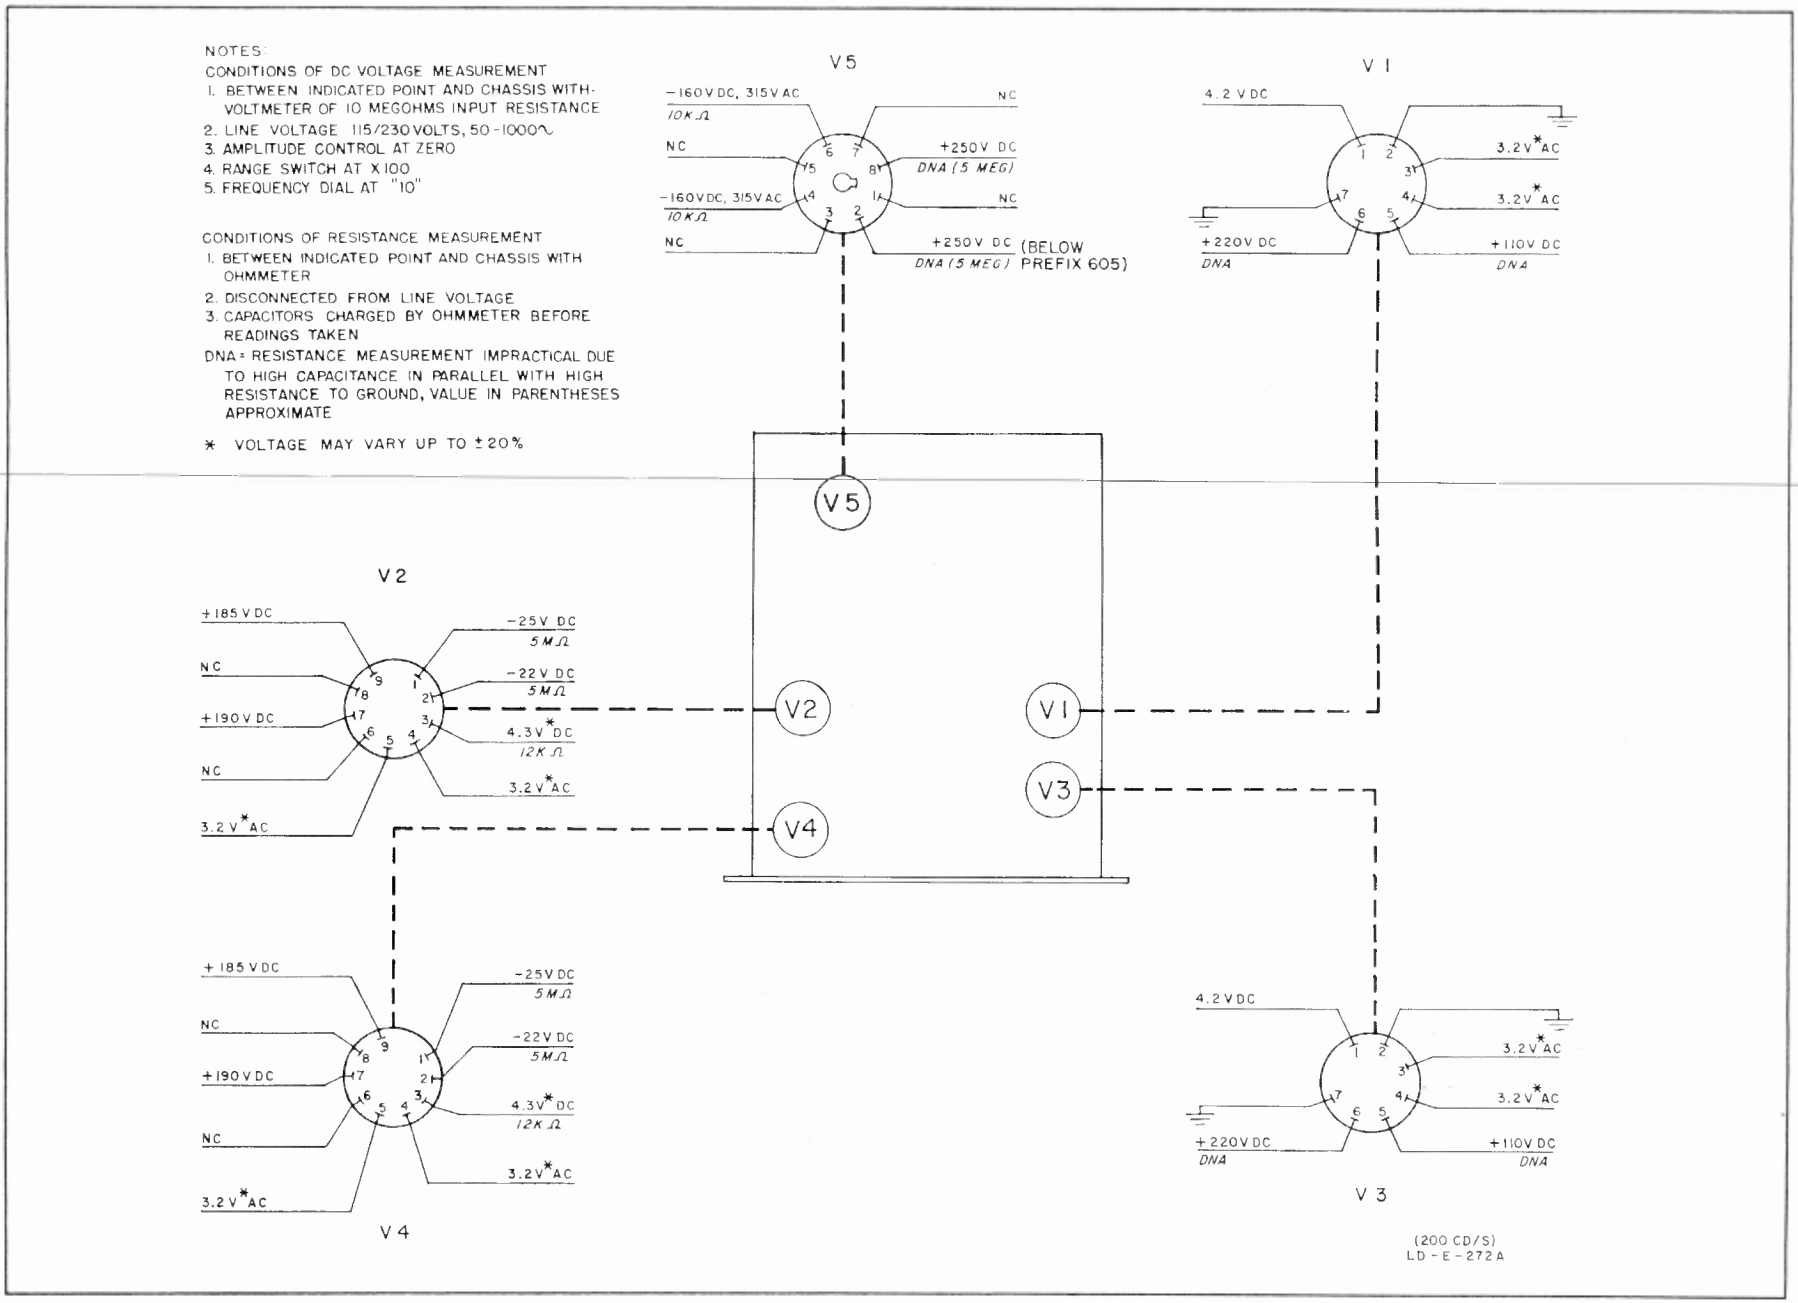

Figure 5-8. Model 200CD Voltage and Resistance Diagram

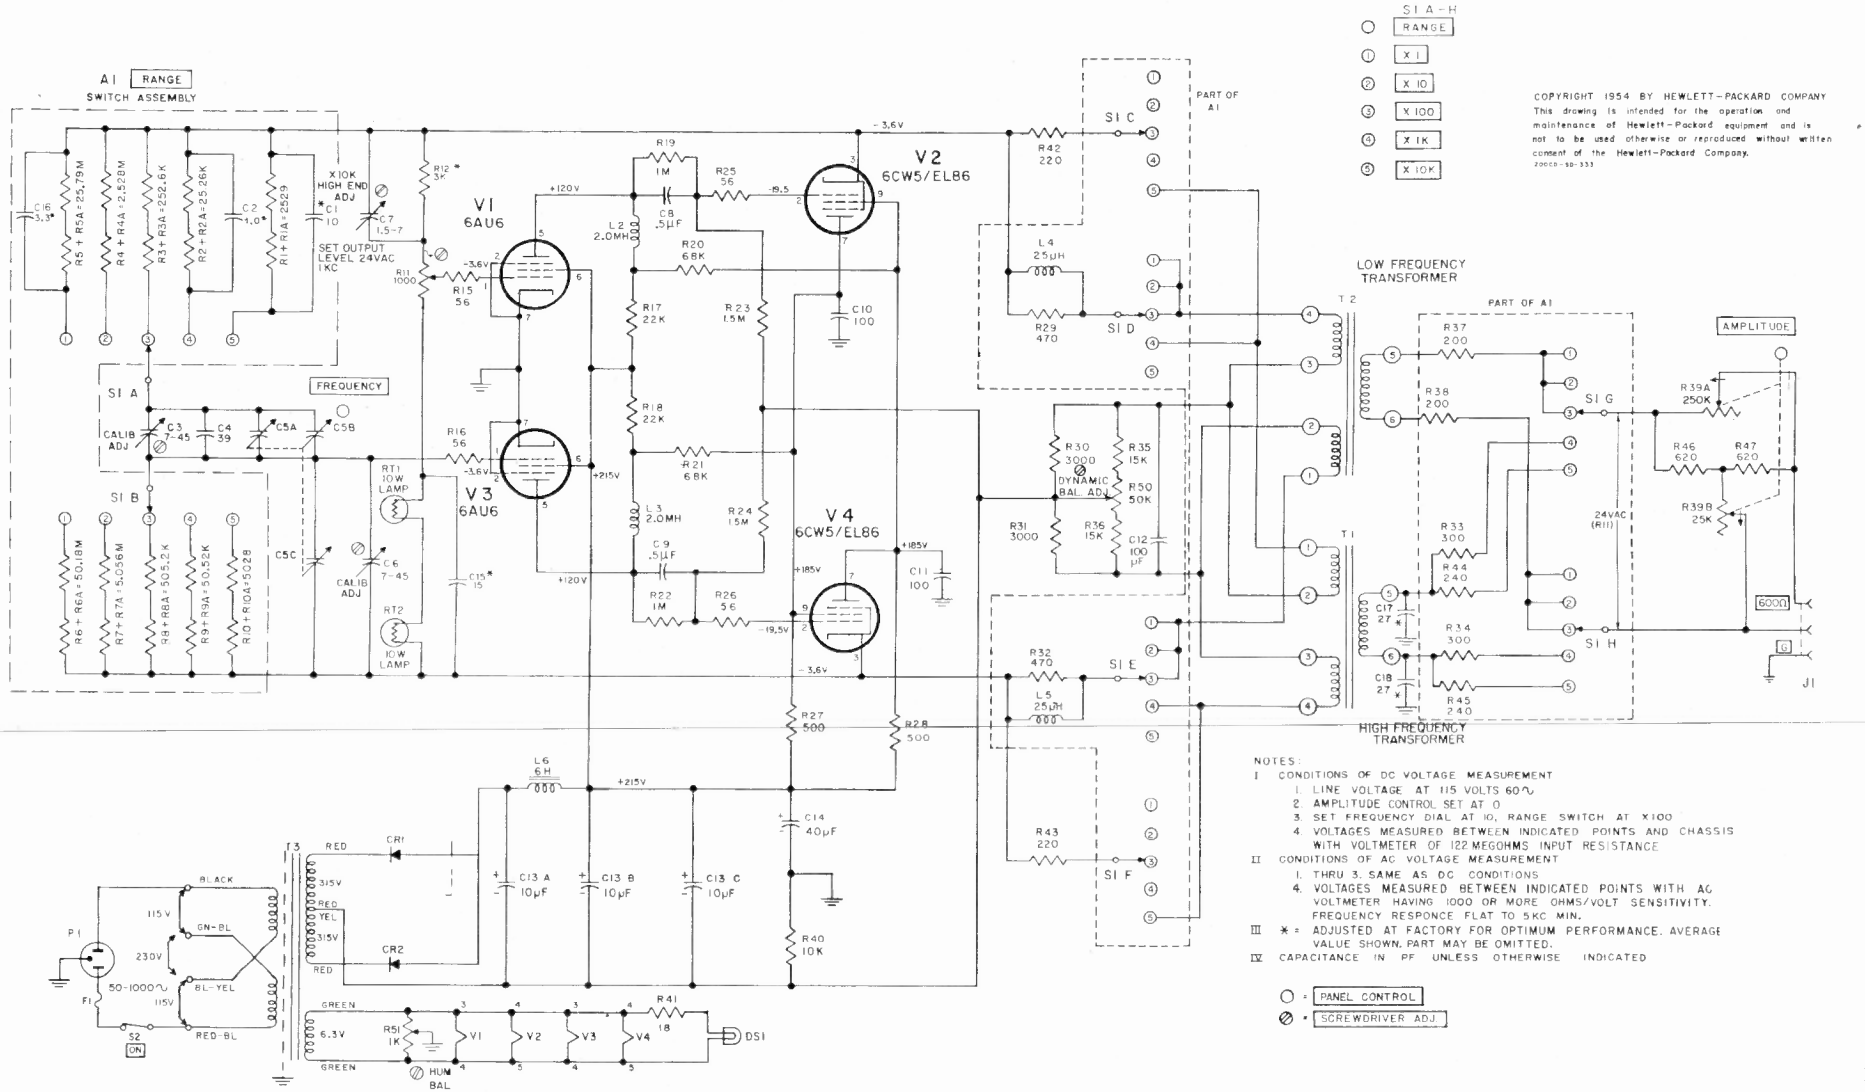

Figure 5-9. Model 200CD Schematic Diagram

SECTION VI
REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp- part number of each part, together with any applicable notes, and provides the follows:

a. Total quantity used in the instrument (TQ column).

b. Description of the part. (See list of abbreviations below.)

c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)

d. Manufacturer's part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

a. Instrument model number.

b. Instrument serial number.

c. Description of the part.

d. Function and location of the part.

DESIGNATORS

A	= assembly	F	= fuse	P	= plug	V	= vacuum tube, neon bulb, photocell etc.
B	= motor	FL	= filter	Q	= transistor		
BT	= battery	HR	= heater	QCR	= transistor-diode	W	= cable
C	= capacitor	J	= jack	R	= resistor	X	= socket
CR	= diode	K	= relay	RT	= thermistor	XDS	= lampholder
DL	= delay line	L	= inductor	S	= switch	XF	= fuseholder
DS	= lamp	M	= meter	T	= transformer		
E	= misc electronic part	MP	= mechanical part	TC	= thermocouple	Z	= network

ABBREVIATIONS

Ag	= silver	ID	= inside diameter	ns	= nanosecond (s) = 10^{-9}	SPDT	= single-pole double-throw
Al	= aluminum	impg	= impregnated	nsr	= not separately replaceable	SPST	= single-pole single-throw
amp	= ampere (s)	incd	= incandescent				
Au	= gold	ins	= insulation (ed)			Ta	= tantalum
				obd	= order by description	TiO_2	= titanium dioxide
C	= capacitor	K	= kilohm (s) = 10^{+3}	OD	= outside diameter		
cer	= ceramic	Kc	= kiloycycle (s) = 10^{+3}			tog	= toggle
coef	= coefficient			p	= peak	tol	= tolerance
com	= common	L	= inductor	pc	= printed circuit	trim	= trimmer
comp	= composition	lin	= linear taper	pf	= picofarad (s) = 10^{-12}	TSTR	= transistor
conn	= connection	log	= logarithmic taper	piv	= peak inverse voltage		
cps	= cycles per second			p/o	= part of	v	= volt (s)
dep	= deposited	m	= milli = 10^{-3}	pos	= position (s)	vacw	= alternating current working volt (s)
DPDT	= double-pole double-throw	ma	= milliampere (s) = 10^{-3}	poly	= polystyrene	var	= variable
DPST	= double-pole single-throw	Mc	= megacycle (s) = 10^{+6}	pot	= potentiometer	vdcw	= direct current working volt (s)
elect	= electrolytic	meg	= megohm (s) = 10^{+6}	p-p	= peak-to-peak		
encap	= encapsulated	met flm	= metal film	prec	= precision (temperature coefficient, long term stability, and/or tolerance)	w	= watt (s)
		mfr	= manufacturer			w/	= with
f	= farad (s)	mtg	= mounting			wiv	= reverse working voltage
FET	= field effect transistor	μ	= micro = 10^{-6}			w/o	= without
fxd	= fixed	my	= Mylar ®	R	= resistor	ww	= wirewound
GaAs	= gallium arsenide			Rh	= rhodium		
Gc	= gigacycle (s) = 10^{+9}	na	= nanoampere (s) = 10^{-9}	rms	= root-mean-square	*	= optimum value selected at factory, average value shown (part may be omitted)
gd	= guard (ed)	NC	= normally closed	rot	= rotary		
Ge	= germanium	Ne	= neon				
grd	= ground (ed)	NO	= normally open	Se	= selenium	**	= no standard type number assigned (selected or special type)
h	= henry (ies)	NPO	= negative positive zero (zero temperature coefficient)	sect	= section (s)		
Hg	= mercury			Si	= silicon		
				sl	= slide		

® Dupont de Nemours

Table 6-1. Reference Designation Index

Circuit Reference	Stock No.	Description	Note
A1	200CD-19WB	Assy, range switch includes: C1, C2, C16, L4, L5, R1 thru R10, R33, R34, R37, R38, R42 thru R45, S1	
C1		Nsr; part of A1	
C2		Nsr; part of A1	
C3	0130-0001	C: var, cer, 7-45 pf, 500 vdcw	
C4	0140-0116	C: fxd, mica, 39 pf ±2%, 500 vdcw	
C5	0121-0018	C: var, 3 sect, 14-617 pf/sect	
C6	0130-0001	C: var, cer, 7-45 pf, 500 vdcw	
C7	0130-0011	C: var, cer, 1.5-7 pf, 500 vdcw	
C8, C9	0160-0024	C: fxd, my, 0.5 μf ±10%, 400 vdcw	
C10, C11	0140-0054	C: fxd, mica, 100 pf ±10%, 500 vdcw	
C12	0180-0013	C: fxd, elect, 100 μf, 100 vdcw	
C13A, B, C	0180-0017	C: fxd, elect, 3 sect, 10 μf/sect, 450 vdcw	
C14	0180-0024	C: fxd, aluminum elect, 40 μf, 450 vdcw	
C15	0140-0004	C: fxd, mica, 15* pf ±10%, 500 vdcw	
C16		Nsr; part of A1	
C17, C18	0140-0005	C: fxd, mica, 27* pf ±10%, 500 vdcw	
CR1, CR2	1901-0037	Rectifier, silicon	
DS1	2140-0003	Lamp, incd: 0.15 amp, 6-8 V	
F1	2110-0021	Fuse, 1.25 amp, s-b (for 115 V operation)	
	2110-0016	Fuse, 0.6 amp, s-b (for 230 V operation)	
J1		Connector assy, consists of:	
	5060-0625	Binding post w/ground link	
	5060-0633	Binding post: red	
	0340-0087	Insulator: bl, 3 hole (rear)	
	0340-0091	Insulator: black, 3 hole (front), with locating key	
L1		Not assigned	
L2, L3	200CD-60C	Coil, R.F., 2 mh	
L4, L5		Nsr; part of A1	
L6	9110-0001	Rector, filter choke, 6 h	
P1	8120-0050	Assy, power cable: smooth, black, shiny, 7.5 ft, NEMA plug	
R1 thru R10		Nsr; part of A1	
R11	2100-0154	R: var, comp, lin, 1 K ohms ±30%, 3/10 W	
R12	0689-3021	R: fxd, comp, 3 K ohms ±5%, 1 W	
R13, R14		Not assigned	
R15, R16	0687-5601	R: fxd, comp, 56 ohms ±10%, 1/2 W	
R17, R18	0761-0030	R: fxd, met flm, 22 K ohms ±5%, 1 W	
R19	0686-1055	R: fxd, comp, 1 M ±5%, 1/2 W	
R20, R21	0761-0083	R: fxd, met flm, 68 K ohms ±5%, 1 W	
R22	0686-1055	R: fxd, comp, 1 M ±5%, 1/2 W	
R23, R24	0687-1551	R: fxd, comp, 1.5 M ±10%, 1/2 W	
R25, R26	0687-5601	R: fxd, comp, 56 ohms ±10%, 1/2 W	
R27, R28	0816-0003	R: fxd, ww, 500 ohms ±10%, 10 W	
R29		R: 470 ohms, nsr; part of L4	
R30, R31	0816-0002	R: fxd, ww, 3 K ohms ±10%, 10 W	
R32		R: 470 ohms, nsr; part of L5	

See introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Circuit Reference	ℎp Stock No.	Description	Note
R33, R34		Nsr; part of A1	
R35, R36	0690-1531	R: fxd, comp, 15 K ohms ±10%, 1 W	
R37, R38		Nsr; part of A1	
R39A, B	2100-0113	R: var, comp, dual tandem, 100 K/sect, 25 K/sect, 2 W	
R40	0816-0008	R: fxd, ww, 10 K ohms ±10%, 10 W	
R41	0690-1801	R: fxd, comp, 18 ohms ±10%, 1 W	
R42 thru R45		Nsr; part of A1	
R46, R47	0686-6215	R: fxd, comp, 620 ohms ±5%, 1/2 W	
R48, R49		Not assigned	
R50	2100-0013	R: var, comp, lin, 50 K ohms ±20%, 1/2 W	
R51	2100-0036	R: var, comp, lin, 1 K ohms, 0.5 W	
RT1, RT2	2140-0007	Lamp, incd: 250 V, 10 W	
S1		Nsr; part of A1	
S2	3101-0001	Switch, tog: SPST, 3 amp	
T1	200CD-9	Transformer, output: high frequency	
T2	9120-0016	Transformer, output: low frequency	
T3	9100-1329	Transformer: power	
V1	1923-0021	Tube, elect: 6AU6, 7 pin minat	
V2	1923-0044	Tube, elect: EL 86, 9 pin minat	
V3	1923-0021	Tube, elect: 6AU6, 7 pin minat	
V4	1923-0044	Tube, elect: EL 86, 9 pin minat	
XF1	1400-0084	Fuseholder: extrator post type	
XV1	1200-0009	Socket, tube: 7 pin, minat	
XV2	1200-0072	Socket, tube: 9 pin	
XV3	1200-0009	Socket, tube: 7 pin, minat	
XV4	1200-0072	Socket, tube: 9 pin	

See introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Circuit Reference	ℎp Stock No.	Description	Note
		MISCELLANEOUS	
	0370-0028	Knob: frequency dial vernier	
	0370-0032	Knob: AMPLITUDE	
	0370-0035	Knob: RANGE	
	0370-0045	Knob: frequency dial, 2-1/4"	
	1220-0006	Shield, base: 9 pin	
	1220-0029	Shield, tube (for V2, V4)	
	1450-0009	Lampholder, bayonet	
	1450-0013	Lampholder, candelabra	
	1460-0114	Spring, gear ass'y	
	1500-0002	Flexible coupler	
	5000-0637	Spring, thrust (vernier drive)	
	5020-0600	Hub, dial -- fits on shaft of 5020-0617	
	5020-0617	Gear spur with shaft	
	5020-0618	Bearing, capacitor drive	
	5040-0212	Insulator, flex coupling	
	5040-0600	Window, dial for curved frequency dial	
	5040-0607	Assy, disc VERNIER DRIVE	
	5060-0020	Assy, gear with coupling hub	
	5060-0021	Assy, gear	
	5080-0205	Coupler, flexible	
	200CD-40A	Dial, frequency calibrated	
	200CD-903	Manual, operating and service	

See introduction to this section

Table 6-2. Replaceable Parts

℘ Stock No.	Description	Mfr.	Mfr. Part No.	TQ		
200CD-9	Transformer, high frequency	28480	200CD-9	1		
200CD-19WB	Assy, range switches includes: C1, C2, C16 R33, R34, R37, R38 L4, L5 R42 thru R45 R1 thru R10 S1	28480	200CD-19WB	1		
200CD-40A	Dial, frequency, calibrated	28480	200CD-40A	1		
200CD-60C	Coil, RF	28480	200CD-60C	2		
0121-0018	C: var, 3 sect, 14-617pf/sect	28480	0121-0018	1		
0130-0001	C: var, cer, 7-45 pf, 500 vdcw	72982	503-000D2PO-33R	2		
0130-0011	C: var, cer, 1.5-7 pf, 500 vdcw	72982	557-023-COPO-10R	1		
0140-0004	C: fxd, mica, 15 pf ±10%, 500 vdcw	72136	CM15B150K	1		
0140-0005	C: fxd, mica, 27 pf ±10%, 500 vdcw	14655	CM15B270K	2		
0140-0054	C: fxd, mica, 100 pf ±10%, 500 vdcw	14655	CM20B101K	2		
0140-0116	C: fxd, mica, 39 pf ±2%, 500 vdcw	14655	CM15E390G	1		
0160-0024	C: fxd, my, 0.5 μf ±10%, 400 vdcw	14655	PKM4P5	2		
0180-0013	C: fxd, elect, 100 μf, 100 vdcw	56289	D33067	1		
0180-0017	C: fxd, elect, 3 sect/10 μf, 450 vdcw	56289	D32631	1		
0180-0024	C: fxd, aluminum elect, 40 μf, 450 vdcw	56289	D32441	1		
0340-0087	Insulator: binding post, black, 3 hole	28480	0340-0087	1		
0340-0091	Insulator: binding post, black, 3 hole, with locating key	28480	0340-0091	1		
0370-0028	Knob: frequency dial vernier	28480	0370-0028	1		
0370-0032	Knob: AMPLITUDE	28480	0370-0032	1		
0370-0035	Knob: RANGE	28480	0370-0035	1		
0370-0045	Knob: frequency dial	28480	0370-0045	1		
0686-1055	R: fxd, comp, 1 M ±5%, 1/2 W	01121	EB 1055	2		
0686-6215	R: fxd, comp, 620 ohms ±5%, 1/2 W	01121	EB 6215	2		
0687-1551	R: fxd, comp, 1.5 M ±10%, 1/2 W	01121	EB 1551	1		
0687-5601	R: fxd, comp, 56 ohms ±10%, 1/2 W	01121	EB 5601	4		
0689-3025	R: fxd, comp, 3 K ohms ±5%, 1 W	01121	GB 3025	1		
0690-1531	R: fxd, comp, 15 K ohms ±10%, 1 W	01121	GB 1531	2		
0690-1801	R: fxd, comp, 18 ohms ±10%, 1 W	01121	GB 1801	1		
0761-0030	R: fxd, met flm 22 K ohms ±5%, 1 W	07115	C32 obd	2		
0761-0083	R: fxd, met flm 68 K ohms ±5%, 1 W	07115	C32 obd	4		
0816-0002	R: fxd, ww, 3 K ohms ±10%, 10 W	35434	Type GC10-3KA	2		
0816-0003	R: fxd, ww, 5000 ohms ±10%, 10 W	35434	G-10, obd#	2		
0816-0008	R: fxd, ww, 10 K ohms ±10%, 10 W	35434	Type C-10, obd#	1		
1200-0009	Socket, tube: 7 pin, minat	91662	316PH-3702	2		
1200-0072	Socket, tube: 9 pin	91662	988PHTDX103	2		
1220-0006	Shield, base: 9 pin	71785	441-43-11-215/202	2		
1220-0029	Shield, tube (for V , V)	98978	TRTg-6027B	2		
1400-0084	Fuseholder: extractor post type	75915	342014	1		
1450-0009	Lampholder, bayonet	72765	223G-CE	1		
1450-0013	Lampholder, candelabra	72765	169B	1		
1460-0114	Spring, gear assy	91260	obd#	1		
1500-0002	Flexible coupler	76487	obd#	1		
1901-0037	Rectifier, silicon	83701	IN2359	2		
1923-0021	Tube, elect: 6AU6, 7 pin minat	33173	6AU6	2		
1923-0044	Tube, elect: EL86, 9 pin minat	73445	EL 86/6CW5	2		

See introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

ℎ Stock No.	Description	Mfr.	Mfr. Part No.	TQ		
2100-0013	R: var, comp, lin, 50 K ohms ±20%, 1/2 W	71590	Model 2	1		
2100-0036	R: var, comp, lin, 1 K ohms, 0.5 W	01121	JA1L0405502UC	1		
2100-0113	R: var, comp, dual tandem, 2 W	01121	JJ59160	1		
2100-0154	R: var, comp, lin, 1 K ohms ±30%, 3/10 W	11237	UPE-70	1		
2110-0016	Fuse, 0.6 amp, s-b (for 230 v operation)	75915	313.600	1		
2110-0021	Fuse, 1.25 amp, s-b (for 115 v operation)	71400	MDL 1.25	1		
2140-0007	Lamp, incd: 250 v, 10 W	24455	8A/S6-12V	2		
2140-0009	Lamp, incd: 0.15 amp, 6-8 v	24455	47	1		
3101-0001	Switch, tog: SPST, 3 amp	04009	80994-11	1		
5000-0637	Spring, thrust (vernier drive)	28480	5000-0637	1		
5020-0600	Hub, dial: fits on shaft of 5020-0617	28480	5020-0600	1		
5020-0618	Bearing, capacitor drive	28480	5020-0618	1		
5040-0212	Insulator, flex coupling	28480	5040-0212	1		
5040-0600	Window, dial for curved frequency dial	28480	5040-0600	1		
5040-0607	Assy, disc vernier drive	28480	5040-0607	1		
5060-0020	Assy, Gear with coupling hub	28480		1		
5060-0021	Assy, Gear	28480		1		
5060-0625	Assy, binding post, ground w/link	28480	5060-0625	1		
5060-0633	Binding post, red	28480	5060-0633	2		
5080-0205	Coupler, flexible	28480	5080-0205	1		
8120-0050	Assy, power cable: Smooth, black, shiny, 7.5 ft. NEMA plug	70903	KH-4096/PH-151/ 7.5 ft.	1		
9100-1329	Transformer, power	28480	9100-1329	1		
9110-0004	Rector, filter choke	72964	8168-D	1		
9120-0016	Transformer, low freq. output	98734	2005	1		

See introduction to this section

APPENDIX
CODE LIST OF MANUFACTURERS (Sheet 1 of 2)

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address
00000	U.S.A. Common	Any supplier of U.S.
00136	McCoy Electronics	Mount Holly Springs, Pa.
00213	Sage Electronics Corp.	Rochester, N. Y.
00334	Humidail Co.	Colton, Calif.
00335	Westrex Corp.	New York, N.Y.
00373	Garlock Packing Co., Electronic Products Div.	Camden, N. J.
00656	Aerovox Corp.	New Bedford, Mass.
00779	Amp, Inc.	Harrisburg, Pa.
00781	Aircraft Radio Corp.	Boonton, N. J.
00815	Northern Engineering Laboratories, Inc.	Burlington, Wis.
00853	Sangamo Electric Company, Ordill Division (Capacitors)	Marion, Ill.
00866	Goe Engineering Co.	Los Angeles, Calif.
00891	Carl E. Holmes Corp.	Los Angeles, Calif.
01121	Allen Bradley Co.	Milwaukee, Wis.
01255	Litton Industries, Inc.	Beverly Hills, Calif.
01281	TRW Semiconductors Inc.	Lawndale, Calif.
01295	Texas Instruments, Inc. Transistor Products Div.	Dallas, Texas
01349	The Alliance Mfg. Co.	Alliance, Ohio
01561	Chassi-Trak Corp.	Indianapolis, Ind.
01589	Pacific Relays, Inc.	Van Nuys, Calif.
01930	Amerock Corp	Rockford, Ill.
01961	Pulse Engineering Co.	Santa Clara, Calif.
02114	Ferroxcube Corp. of America	Saugerties, N.Y.
02286	Cole Mfg. Co.	Palo Alto, Calif.
02660	Amphenol-Borg Electronics Corp.	Chicago, Ill.
02735	Radio Corp. of America, Semiconductor and Materials Div.	Somerville, N.J.
02771	Vocaline Co. of America, Inc.	Old Saybrook, Conn.
02777	Hopkins Engineering Co.	San Fernando, Calif.
03508	G.E. Semiconductor Products Dept.	Syracuse, N.Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio
03797	Eldema Corp.	El Monte, Calif.
03877	Transitron Electronic Corp.	Wakefield, Mass.
03888	Pyrofilm Resistor Co.	Morristown, N.J.
03954	Air Marine Motors, Inc.	Los Angeles, Calif.
04009	Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.
04013	Taurus Corp.	Lambertville, N. J.
04062	Elmenco Products Co.	New York, N.Y.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S.C.
04298	Elgin National Watch Co., Electronics Division	Burbank, Calif.
04354	Precision Paper Tube Co.	Chicago, Ill.
04404	Dymec Division of Hewlett-Packard Co.	Palo Alto, Calif.
04651	Sylvania Electric Prods., Inc. Electronic Tube Div.	Mountain View, Calif.
04713	Motorola, Inc., Semiconductor Prod. Div.	Phoenix, Arizona
04732	Filtron Co., Inc., Western Div.	Culver City, Calif.
04773	Automatic Electric Co.	Northlake, Ill.
04777	Automatic Electric Sales Corp.	Northlake, Ill.
04796	Sequoia Wire & Cable Co.	Redwood City, Calif.
04811	Precision Coil Spring Co.	El Monte, Calif.
04870	P. M. Motor Company	Chicago 44, Ill.
05006	Twentieth Century Plastics, Inc.	Los Angeles, Calif.
05277	Westinghouse Electric Corp., Semi-Conductor Dept.	Youngwood, Pa.
05347	Ultronix, Inc.	San Mateo, Calif.
05593	Illumitronic Engineering Co.	Sunnyvale, Calif.
05616	Cosmo Plastic (c/o Electrical Spec. Co.)	Cleveland, Ohio
05624	Barber Colman Co.	Rockford, Ill.
05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N.Y.
05729	Metropolitan Telecommunications Corp. Metro Cap. Division	Brooklyn, N.Y.
05783	Stewart Engineering Co.	Santa Cruz, Calif.
05820	Wakefield Engineering Inc.	Wakefield, Mass.
06004	The Bassick Co.	Bridgeport, Conn.
06175	Bausch and Lomb Optical Co.	Rochester, N.Y.
06402	E.T.A. Products Co. of America	Chicago, Ill.
06475	Western Devices, Inc.	Inglewood, Calif.
06540	Amatom Electronic Hardware Co. Inc.	New Rochelle, N. Y.
06555	Beede Electrical Instrument Co., Inc.	Penacook, N.H.
06751	U. S. Semcor Division of Nuclear Corp. of America	Phoenix, Arizona
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.
07088	Kelvin Electric Co.	Van Nuys. Calif.
07115	Corning Glass Works Electronic Components Dept.	Bradford, Pa.
07126	Digitran Co.	Pasadena, Calif.
07137	Transistor Electronics Corp.	Minneapolis, Minn.
07138	Westinghouse Electric Corp. Electronic Tube Div.	Elmira, N.Y.
07149	Filmohm Corp.	New York, N. Y.
07233	Cinch-Graphik Co.	City of Industry, Calif.
07261	Avnet Corp.	Los Angeles, Calif.
07263	Fairchild Semiconductor Corp.	Mountain View, Calif.
07322	Minnesota Rubber Co.	Minneapolis, Minn.
07387	The Birtcher Corp.	Los Angeles, Calif.
07700	Technical Wire Products	Springfield, N.J.
07910	Continental Device Corp.	Hawthorne, Calif.
07933	Rheem Semiconductor Corp.	Mountain View, Calif.
07966	Shockley Semi-Conductor Laboratories	Palo Alto, Calif.
07980	Boonton Radio Corp.	Boonton, N.J.
08145	U.S. Engineering Co.	Los Angeles, Calif.
08289	Blinn, Delbert, Co.	Pomona, Calif.
08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada.
08717	Sloan Company	Burbank, Calif.
08718	Cannon Electric Co., Phoenix Div.	Phoenix, Ariz.
08792	CBS Electronics Semiconductor Operations, Div. of C.B.S., Inc.	Lowell, Mass.
08984	Mel-Rain	Indianapolis, Ind.
09026	Babcock Relays, Inc.	Costa Mesa, Calif.
09134	Texas Capacitor Co.	Houston, Texas
09145	Atohm Electronics	Sun Valley, Calif.
09250	Electro Assemblies, Inc.	Chicago, Ill.
09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada
09664	The Bristol Co.	Waterbury, Conn.
10214	General Transistor Western Corp.	Los Angeles, Calif.
10411	Ti-Tal, Inc.	Berkeley, Calif.
10646	Carborundum Co.	Niagara Falls, N.Y.
11236	CTS of Berne, Inc.	Berne, Ind.
11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.
11312	Microwave Electronics Corp.	Palo Alto, Calif.
11534	Duncan Electronic, Inc.	Santa Ana, Calif.
11711	General Instrument Corporation Semiconductor Division	Newark, N.J.
11717	Imperial Electronic, Inc.	Buena Park, Calif.
11870	Melabs, Inc.	Palo Alto, Calif.
12136	Philadelphia Handle Co.	Camden, N. J.
12697	Clarostat Mfg. Co.	Dover, N.H.
12859	Nippon Electric Co., Ltd.	Tokyo, Japan
12930	Delta Semiconductor Inc.	Newport Beach, Calif.
13103	Thermolloy	Dallas, Texas
13396	Telefunken (G.M.B.H.)	Hannover, Germany
13835	Midland Mfg. Co.	Kansas City, Kansas
14099	Sem-Tech	Newbury Park, Calif.
14153	Calif. Resistor Corp.	Santa Monica, Calif.
14298	American Components, Inc.	Conshohocken, Pa.
14655	Cornell Dubilier Elec. Corp.	So. Plainfield, N.J.
14960	Williams Mfg. Co.	San Jose, Calif.
15203	Webster Electronics Co. Inc.	Brooklyn, N.Y.
15291	Adjustable Bushing Co.	N. Hollywood, Calif.
15772	Twentieth Century Coil Spring Co.	Santa Clara, Calif.
15909	The Daven Co.	Livingston, N.J.
16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
16352	Computer Diode Corp.	Lodi, N. J.
16688	De Jur-Amsco Corporation	Long Island City 1, N.Y.
16758	Delco Radio Div. of G.M. Corp.	Kokomo, Ind.
17109	Thermonetics Inc.	Canoga Park, Calif.
17474	Tranex Company	Mountain View, Calif.
18486	Radio Industries	Des Plaines, Ill.
18583	Curtis Instrument Inc.	Mt. Kisco, N.Y.
18873	E. I. DuPont and Co., Inc.	Wilmington, Del.
19315	Eclipse Pioneer, Div. of Bendix Aviation Corp.	Teterboro, N.J.
19500	Thomas A. Edison Industries, Div. of McGraw-Edison Co.	West Orange, N.J.
19701	Electra Manufacturing Co.	Kansas City, Mo.
20183	Electronic Tube Corp.	Philadelphia, Pa.
21226	Executive, Inc.	New York, N.Y.
21520	Fansteel Metallurgical Corp.	No. Chicago, Ill.
21335	The Fafnir Bearing Co.	New Britain, Conn.
21964	Fed. Telephone and Radio Corp.	Clifton, N.J.
24446	General Electric Co.	Schenectady, N.Y.
24455	G.E., Lamp Division	Nela Park, Cleveland, Ohio
24655	General Radio Co.	West Concord, Mass.
26365	Gries Reproducer Corp.	New Rochelle, N.Y.
26462	Grobet File Co. of America, Inc.	Carlstadt, N.J.
26992	Hamilton Watch Co.	Lancaster, Pa.
28480	Hewlett-Packard Co.	Palo Alto, Calif.
33173	G.E. Receiving Tube Dept.	Owensboro, Ky.
35434	Lectrohm Inc.	Chicago, Ill.
36196	Sanwyck Corp.	Hawkesbury, Ontario, Canada
37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.
39543	Mechanical Industries Prod. Co.	Akron, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N.H.
42190	Muter Co.	Chicago, Ill.
43990	C.A. Norgren Co.	Englewood, Colo.
44655	Ohmite Mfg. Co.	Skokie, Ill.
47904	Polaroid Corp.	Cambridge, Mass.
48620	Precision Thermometer and Inst. Co.	Philadelphia, Pa.
49956	Raytheon Company	Lexington, Mass.
52090	Rowan Controller Co.	Baltimore, Md.
53743	Ward Leonard Electric	Mt. Vernon, N.Y.
54294	Shallcross Mfg. Co.	Selma, N.C.
55026	Simpson Electric Co.	Chicago, Ill.
55933	Sonotone Corp.	Elmsford, N.Y.
55938	Sorenson & Co., Inc.	So. Norwalk, Conn.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.
56289	Sprague Electric Co.	North Adams, Mass.
59446	Telex, Inc.	St. Paul, Minn.
59730	Thomas & Betts Co.	Elizabeth 1, N. J.
60741	Tripplett Electrical Inc.	Bluffton, Ohio
61775	Union Switch and Signal, Div. of Westinghouse Air Brake Co.	Swissvale, Pa.
62119	Universal Electric Co.	Owosso, Mich.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.
64959	Western Electric Co., Inc.	New York, N.Y.
65092	Weston Inst. Div. of Daystrom, Inc.	Newark, N.J.
66295	Wittek Manufacturing Co.	Chicago 23, Ill.
66346	Wollensak Optical Co.	Rochester, N.Y.
70276	Allen Mfg. Co.	Hartford, Conn.
70309	Allied Control Co., Inc.	New York, N.Y.
70319	Alimetal Screw Prod. Co., Inc.	Garden City, N.Y.
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.
70563	Amperite Co., Inc.	New York, N.Y.
70903	Belden Mfg. Co.	Chicago, Ill.
70998	Bird Electronic Corp.	Cleveland, Ohio
71002	Birnbach Radio Co.	New York, N.Y.
71041	Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.
71218	Bud Radio Inc.	Cleveland, Ohio
71286	Camloc Fastener Corp.	Paramus, N.J.
71313	Allen D. Cardwell Electronic Prod. Corp.	Plainville, Conn.
71400	Bussmann Fuse Div. of McGraw-Edison Co.	St. Louis, Mo.
71436	Chicago Condenser Corp.	Chicago, Ill.
71450	CTS Corp.	Elkhart, Ind.
71468	Cannon Electric Co.	Los Angeles, Calif.
71471	Cinema Engineering Co.	Burbank, Calif.
71482	C.P. Clare & Co.	Chicago, Ill.
71590	Centralab Div. of Globe Union Inc.	Milwaukee, Wis.
71616	Commercial Plastics Co.	Chicago, Ill.
71700	The Cornish Wire Co.	New York, N.Y.
71744	Chicago Miniature Lamp Works	Chicago, Ill.
71753	A.O. Smith Corp., Crowley Div.	West Orange, N.J.
71785	Cinch Mfg. Corp.	Chicago, Ill.
71984	Dow Corning Corp.	Midland, Mich.
72092	Eitel-McCullough, Inc.	San Bruno, Calif.
72136	Electro Motive Mfg. Co., Inc.	Willimantic, Conn.
71707	Coto Coil Co., Inc.	Providence, R.I.
72354	John E. Fast & Co.	Chicago, Ill.
72619	Dialight Corp.	Brooklyn, N.Y.
72656	General Ceramics Corp.	Keasbey, N.J.
72699	General Instrument Corp., Semiconductor Div.	Newark, N.J.
72758	Girard-Hopkins	Oakland, Calif.
72765	Drake Mfg. Co.	Chicago, Ill.
72825	Hugh H. Eby Inc.	Philadelphia, Pa.
72928	Gudeman Co.	Chicago, Ill.
72964	Robert M. Hadley Co.	Los Angeles, Calif.
72982	Erie Resistor Corp.	Erie, Pa.
73061	Hansen Mfg. Co., Inc.	Princeton, Ind.
73076	H.M. Harper Co.	Chicago, Ill.
73138	Helipot Div. of Beckman Instruments, Inc.	Fullerton, Calif.
73293	Hughes Products Division of Hughes Aircraft Co.	Newport Beach, Calif.
73445	Amperex Electronic Co., Div. of North American Phillips Co, Inc.	Hicksville, N.Y.
73490	Beckman Helipot Corp.	So. Pasadena, Calif.
73506	Bradley Semiconductor Corp.	Hamden, Conn.
73559	Carling Electric, Inc.	Hartford, Conn.
73682	George K. Garrett Co., Inc.	Philadelphia, Pa.
73734	Federal Screw Prod. Co.	Chicago, Ill.
73743	Fischer Special Mfg. Co.	Cincinnati, Ohio
73793	The General Industries Co.	Elyria, Ohio
73846	Goshen Stamping & Tool Co.	Goshen, Ind.
73899	JFD Electronics Corp.	Brooklyn, N. Y.
73905	Jennings Radio Mfg. Co.	San Jose, Calif.
74276	Signalite Inc.	Neptune, N.J.
74455	J.H. Winns, and Sons	Winchester, Mass.
74861	Industrial Condenser Corp.	Chicago, Ill.
74868	R.F. Products Division of Amphenol-Borg Electronics Corp.	Danbury, Conn.
74970	E.F. Johnson Co.	Waseca, Minn.
75042	International Resistance Co.	Philadelphia, Pa.
75173	Jones, Howard B., Division of Cinch Mfg. Corp.	Chicago, Ill.
75378	James Knights Co.	Sandwich, Ill.
75382	Kulka Electric Corporation	Mt. Vernon, N.Y.
75818	Lenz Electric Mfg. Co.	Chicago, Ill.
75915	Littlefuse Inc.	Des Plaines, Ill.
76005	Lord Mfg. Co.	Erie, Pa.
76210	C.W. Marwedel	San Francisco, Calif.
76433	Micamold Electronic Mfg. Corp.	Brooklyn, N.Y.
76487	James Millen Mfg. Co., Inc.	Malden, Mass.
76493	J.W. Miller Co.	Los Angeles, Calif.
76530	Monadnock Mills	San Leandro, Calif.
76545	Mueller Electric Co.	Cleveland, Ohio.
76854	Oak Manufacturing Co.	Crystal Lake, Ill.
77068	Bendix Pacific Division of Bendix Corp.	No. Hollywood, Calif.
77075	Pacific Metals Co.	San Francisco, Calif.
77221	Phaostron Instrument and Electronic Co.	South Pasadena, Calif.
77250	Phoell Mfg. Co.	Chicago, Ill.
77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
77342	Potter and Brumfield, Div. of American Machine and Foundry	Princeton, Ind.
77630	Radio Condenser Co.	Camden, N.J.
77638	Radio Receptor Co., Inc.	Brooklyn, N.Y.
77764	Resistance Products Co.	Harrisburg, Pa.
77969	Rubbercraft Corp. of Calif.	Torrance, Calif.
78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.
78283	Signal Indicator Corp.	New York, N.Y.
78290	Struthers-Dunn Inc.	Pitman, N.J.
78452	Thompson-Bremer & Co.	Chicago, Ill.
78471	Tilley Mfg. Co.	San Francisco, Calif.
78488	Stackpole Carbon Co.	St. Marys, Pa.
78493	Standard Thomson Corp.	Waltham, Mass.
78553	Tinnerman Products, Inc.	Cleveland, Ohio
78790	Transformer Engineers	Pasadena, Calif.
78947	Ucinite Co.	Newtonville, Mass.
79142	Veeder Root, Inc.	Hartford, Conn.
79251	Wenco Mfg. Co.	Chicago, Ill.
79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
80031	Mepco Division of Sessions Clock Co.	Morristown, N.J.
80120	Schnitzer Alloy Products	Elizabeth, N.J.
80130	Times Facsimile Corp.	New York, N.Y.
80131	Electronic Industries Association. Any brand tube meeting EIA standards	Washington, D.C.
80207	Unimax Switch, Div. of W.L. Maxson Corp.	Wallingford, Conn.
80223	United Transformer Corp.	New York, N.Y.
80248	Oxford Electric Corp.	Chicago, Ill.
80294	Bourns Laboratories, Inc.	Riverside, Calif.
80411	Acro Div. of Robertshaw Fulton Controls Co.	Columbus 16, Ohio
80486	All Star Products Inc.	Defiance, Ohio
80509	Avery Adhesive Label Corp.	Monrovia, Calif.
80583	Hammerlund Co., Inc.	New York, N.Y.
80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
81030	International Instruments, Inc.	New Haven, Conn.
81073	Grayhill Co.	LaGrange, Ill.
81095	Triad Transformer Corp.	Venice, Calif.
81312	Winchester Electronics Co., Inc.	Norwalk, Conn.

From: FSC. Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

APPENDIX
CODE LIST OF MANUFACTURERS (Sheet 2 of 2)

Code No.	Manufacturer	Address
81349	Military Specification	.....
81415	Wilkor Products, Inc.	Cleveland, Ohio
81453	Raytheon Mfg. Co., Industrial Components Div., Industr. Tube Operations	Newton, Mass.
81483	International Rectifier Corp.	El Segundo, Calif.
81541	The Airpax Products Co.	Cambridge, Mass.
81860	Barry Controls, Inc.	Watertown, Mass.
82042	Carter Parts Co.	Skokie, Ill.
82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.
82170	Allen B. DuMont Labs, Inc.	Clifton, N.J.
82209	Maguire Industries, Inc.	Greenwich, Conn.
82219	Sylvania Electric Prod, Inc. Electronic Tube Div.	Emporium, Pa.
82376	Astron Co.	East Newark, N.J.
82389	Switchcraft, Inc.	Chicago, Ill.
82647	Metals and Controls, Inc., Div. of Texas Instruments, Inc., Spencer Prods.	Attleboro, Mass.
82866	Research Products Corp.	Madison, Wis.
82877	Rotron Manufacturing Co., Inc.	Woodstock, N.Y.
82893	Vector Electronic Co.	Glendale, Calif.
83053	Western Washer Mfr. Co.	Los Angeles, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.
83086	New Hampshire Ball Bearing, Inc.	Peterborough, N.H.
83125	Pyramid Electric Co.	Darlington, S.C.
83148	Electro Cords Co.	Los Angeles, Calif.
83186	Victory Engineering Corp.	Springfield, N.J.
83298	Bendix Corp., Red Bank Div.	Red Bank, N.J.
83315	Hubbell Corp.	Mundelein, Ill.
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.
83385	Central Screw Co.	Chicago, Ill.
83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N.J.
83740	Eveready Battery	New York, N.Y.
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
83821	Loyd Scruggs Co.	Festus, Mo.
84171	Arco Electronis, Inc.	New York, N.Y.
84396	A.J. Glesener Co., Inc.	San Francisco, Calif.
84411	Good All Electric Mfg. Co.	Ogallala, Neb.
84970	Sarkes Tarzian, Inc.	Bloomington, Ind.
85454	Boonton Molding Company	Boonton, N.J.
85471	A.B. Boyd Co.	San Francisco, Calif.
85474	R.M. Bracamonte & Co.	San Francisco, Calif.
85660	Koiled Kords, Inc.	New Haven, Conn.
85911	Seamless Rubber Co.	Chicago, Ill.
86197	Clifton Precision Products	Clifton Heights, Pa.
86579	Precision Rubber Products Corp.	Dayton, Ohio
86684	Radio Corp. of America, RCA Electron Tube Div.	Harrison, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.
87473	Western Fibrous Glass Products Co.	San Francisco, Calif.
87664	Van Waters & Rogers Inc.	Seattle, Wash.
87930	Tower Mfg. Corp	Providence, R. I.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.
88698	General Mills, Inc.	Buffalo, N.Y.
89231	Graybar Electric Co.	Oakland, Calif.
89462	Waldes Kohinoor, Inc.	Cambridge, Mass.
89473	General Electric Distributing Corp.	Schenectady, N.Y.
89636	Carter Parts Div. of Economy Baler Co.	Chicago, Ill.
89665	United Transformer Co.	Chicago, Ill.
90179	U.S. Rubber Co., Mechanical Goods Div.	Passaic, N.J.
90970	Bearing Engineering Co.	San Francisco, Calif.
91260	Conner Spring Mfg. Co.	San Francisco, Calif.
91345	Miller Dial & Nameplate Co.	El Monte, Calif.
91418	Radio Materials Co.	Chicago, Ill.
91506	Augat Brothers', Inc.	Attleboro, Mass.
91637	Dale Electronics, Inc.	Columbus, Nebr.
91662	Elco Corp.	Philadelphia, Pa.
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.
91827	K F Development Co.	Redwood City, Calif.
91929	Minneapolis-Honeywell Regulator Co., Microswitch Div.	Freeport, Ill.
91961	Nahm-Bros. Spring Co.	Oakland, Calif.
92180	Tru-Connector Corp.	Peabody, Mass.
92196	Universal Metal Prod., Inc.	Bassett Puente, Calif.
92367	Elgeet Optical Co., Inc.	Rochester, N.Y.
92607	Tinsolite Insulated Wire Co.	Tarrytown, N.Y.
93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.
93369	Robbins and Myers, Inc.	New York, N.Y.
93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio
93788	Howard J. Smith inc.	Port Monmouth, N. J.
93929	G. V. Controls	Livingston, N. J.
93983	Insuline-Van Norman Ind., Inc. Electronic Division	Manchester, N.H.
94137	General Cable Corp.	Bayonne, N.J.
94144	Raytheon Mfg. Co., Industrial Components Div., Receiving Tube Operation	Quincy, Mass.
94145	Raytheon Mfg. Co., Semiconductor Div., California Street Plant	Newton, Mass.
94148	Scientific Radio Products, Inc.	Loveland, Colo.
94154	Tung-Sol Electric, Inc.	Newark, N.J.
94197	Curtiss-Wright Corp., Electronics Div.	East Paterson, N.J.
94222	Southco Div. of S. Chester Corp.	Lester, Pa.
94310	Tru Ohm Prod. Div. of Model Engineering and Mfg. Co.	Chicago, Ill.
94330	Wire Cloth Products Inc.	Chicago, Ill.
94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.
95023	Philbrick Researchers, Inc.	Boston, Mass.
95236	Allies Products Corp.	Miami, Fla.
95238	Continental Connector Corp.	Woodside, N.Y.
95263	Leecraft Mfg. Co., Inc.	New York, N.Y.
95264	Lerco Electronics, Inc.	Burbank, Calif.
95265	National Coil Co.	Sheridan, Wyo.
95275	Vitramon, Inc.	Bridgeport, Conn.
95348	Gordos Corp.	Bloomfield, N.J.
95354	Methode Mfg. Co.	Chicago, Ill.
95712	Dage Electric Co., Inc.	Franklin, Ind.
95987	Weckesser Co.	Chicago, Ill.
96067	Huggins Laboratories	Sunnyvale, Calif.
96095	Hi-Q Division of Aerovox	Olean, N.Y.
96256	Thordarson-Meissner Div. of Maguire Industries, Inc.	Mt. Carmel, Ill.
96296	Solar Manufacturing Co.	Los Angeles, Calif.
96330	Carlton Screw Co.	Chicago, Ill.
96341	Microwave Associates, Inc.	Burlington, Mass.
96501	Excel Transformer Co.	Oakland, Calif.
97464	Industrial Retaining Ring Co.	Irvington, N.J.
97539	Automatic and Precision Mfg. Co.	Yonkers, N.Y.
97966	CBS Electronics, Div. of C.B.S., Inc.	Danvers, Mass.
97979	Reon Resistor Corp.	Yonkers, N.Y.
98141	Axel Brothers Inc.	Jamaica, N.Y.
98159	Rubber Teck, Inc.	Gardena, Calif.
98220	Francis L. Mosley	Pasadena, Calif.
98278	Microdot, Inc.	So. Pasadena, Calif.
98291	Sealectro Corp.	Mamaroneck, N.Y.
98405	Carad Corp.	Redwood City, Calif.
98731	General Mills	Minneapolis, Minn.
98821	North Hills Electric Co.	Mineola, N.Y.
98925	Clevite Transistor Prod. Div. of Clevite Corp.	Waltham, Mass.
98978	International Electronic Research Corp.	Burbank, Calif.
99109	Columbia Technical Corp.	New York, N.Y.
99313	Varian Associates	Palo Alto, Calif.
99515	Marshall Industries, Electron Products Division	Pasadena, Calif.
99707	Control Switch Division, Controls Co. of America	El Segundo, Calif.
99800	Delevan Electronics Corp.	East Aurora, N.Y.
99848	Wilco Corporation	Indianapolis, Ind.
99934	Renbrandt, Inc.	Boston, Mass.
99942	Hoffman Semiconductor Div. of Hoffman Electronics Corp.	Evanston, Ill.
99957	Technology Instrument Corp of Calif.	Newbury Park, Calif.

THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.

J0000	Winchester Electronics, Inc.	Santa Monica, Calif.
0000F	Malco Tool and Die	Los Angeles, Calif.
0000M	Western Coil Div. of Automatic Ind., Inc.	Redwood City, Calif.
0000P	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
0000Z	Willow Leather Products Corp.	Newark, N.J.
000AA	British Radio Electronics Ltd.	Washington, D.C.
000AB	ETA	England
000AC	Indiana General Corp., Elect. Div.	Indiana
000BB	Precision Instrument Components Co.	Van Nuys, Calif.
000MM	Rubber Eng. & Development	Hayward, Calif.
000NN	A "N" D Manufacturing Co.	San Jose 27, Calif.
000QQ	Cooltron	Oakland, Calif.
000SS	Control of Elgin Watch Co.	Burbank, Calif.
000WW	California Eastern Lab.	Burlingame, Calif.
000YY	S.K. Smith Co.	Los Angeles 45, Calif.

From: FSC. Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

HEWLETT-PACKARD INTERNATIONAL OFFICES
Electronic Instrument Sales and Service

ARGENTINA
Mauricio A. Saurez
Telecomunicaciones
Carlos Calvo 224, Buenos Aires
Tel: 30-6312

AUSTRALIA
Sample Electronics (Vic.) Pty. Ltd.
9-11 Cremorne Street
Richmond E. 1, Victoria
Tel: 42-4757 (3 lines)
Sample Electronics (N.S.W.) Pty. Ltd.
4 Grose Street, Glebe, N.S.W.
Tel: 69-6338 (6 lines)

AUSTRIA
UNILABOR H.m.b.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33, Vienna IX/71
Tel: 42 61 81

BELGIUM
Hewlett-Packard Benelux
20-24 Rue de l'Hopital, Brussels 1
Tel: 11.22.20

BRAZIL
Ciental Importacao e Comercio Ltda.
R. Des Eliseu Guilherme, 62
Sao Paulo 6
Tel: 32-4332

CHILE
Hector Calcagni
Casilla 13942, Santiago
Tel: 6.42.26

COLOMBIA
Instrumentacion Henrik A. Langebeck & Cia. Ltda.
Apartado Aereo 6287
Bogota 1, D.E.
Tel: 45-78-06
Cable: AARIS - Bogota

DENMARK
Tage Olsen A/S
Ronnegade 1, Copenhagen 0
Tel: 29.48.00

FINLAND
INTO O/Y
P.O. Box 153
11 Meritullinkatu, Helsinki
Tel: 6.11.33

FRANCE
Hewlett-Packard France
150 Blvd. Massena, Paris 13e
Tel: 707.97.19

GERMANY
Hewlett-Packard VgmbH
Steindamm 35, Hamburg 1
Tel: 24.05.51
Hewlett-Packard VgmbH
Kurhessenstrasse 95
Frankfurt a. Main
Tel: 52.00.36
Hewlett-Packard VgmbH
Reginfriedstrasse 13
Munich 9
Tel: 49.51.21/2
Hewlett-Packard VgmbH
Technisches Buro
Herrenbergerstrasse 110
703 Boblingen, Wurttemberg
Tel: 6971
Hewlett-Packard VgmbH
Lietzenburger Strasse 30
1000 Berlin 30
Tel: 24 92 71

IN EUROPE
Hewlett-Packard, S. A.
54 Route des Acacias
Geneva, Switzerland
Telephone: (022) 42.81.50
Telex: 2.24.86
Cable: HEWPACKSA

GREECE
K. Karayannis
Klaftmonos Square, Athens 124
Tel: 230.301

INDIA
The Scientific Instrument Company, Ld.
6, Tej Bahadur Sapru Road, Allahabad 1
Tel: 2451
The Scientific Instrument Company, Ld.
240, Dr. Dadabhai Naoroji Rd., Bombay 1
Tel: 26-2642
The Scientific Instrument Company, Ld.
11, Esplanade East, Calcutta 1
Tel: 23-4129
The Scientific Instrument Company, Ld.
30, Mount Road, Madras 2
Tel: 86339
The Scientific Instrument Company, Ld.
B-7, Ajmeri Gate Extn., New Delhi 1
Tel: 271053

IRAN
Telecom Ltd.
P.O. Box 1812, Tehran
Tel: 43850

ISRAEL
Electronics & Engineering Ltd.
16 Kremenetski St., Tel Aviv
Tel: 35021-2-3

ITALY
Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46, Milan
Tel: 69.15.84/5/6
Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi, 25, Roma-Eur
Tel: 59.12.544/5

JAPAN
Yokogawa-Hewlett-Packard Ltd.
2270 Ishikawa-cho
Hachioji, Tokyo
Tel: Hachioji 0426-3-1231 (19 lines)
Yokogawa-Hewlett-Packard Ltd.
No. 3, 6-chome, Aoyama-Kitamachi
Akasaka, Minato-ku, Tokyo
Tel: 403-6511
Yokogawa-Hewlett-Packard Ltd.
No. 8, Umeda, Kita-ku, Osaka
Tel: 313-0091
Yokogawa-Hewlett-Packard Ltd.
No. 4, 3-chome, Himeikedori,
Chigusa-ku, Nagoya
Tel: 751-8545

KOREA
American Trading Company, Korea, Ltd.
112-35 Sokong-Dong, Jung-ku
Seoul P.O. Box 1103, Seoul
Tel: 3-7049, 3-7613

NETHERLANDS
Hewlett-Packard Benelux N.V.
23 Burg Roellstraat, Amsterdam W.
Tel: (020) 13.28.98 and 13.54.99

NEW ZEALAND
Sample Electronics (N. Z.) Ltd.
8 Matipo Street
Onehunga S. E. 5, Auckland
Tel: 565-361

NORWAY
Morgenstierne & Co. A/S
Ingeniorfirma
6 Wessels Gate, Oslo
Tel: 20 16 35

PANAMA
Electronico Balboa, S.A.
P.O. Box 4929
Panama City 5, Panama
Tel: 3-0833

PERU
Fernando Ezeta B.
Casilla 3061
Lima
Tel: 78745

PORTUGAL
TELECTRA
Rua Rodrigo da Fonseca 103
P.O. Box 2531, Lisbon 1
Tel: 68 60 72 and 68 60 73 and 68 60 74

PUERTO RICO & VIRGIN ISLANDS
San Juan Electronics, Inc.
150 Ponce de Leon, Stop 3
P.O. Box 5167
Pta. de Tierra Sta., San Juan 00906
Tel: 725-3342, 724-4406

SPAIN
ATAIO, Ingenieros
Enrique Larreta 12, Madrid 6
Tel: 235.43.44 and 235.43.45

SOUTH AFRICA
F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitencingle Street, Cape Town
Tel: 3-3817

SWEDEN
H-P Instrument AB
Centralvagen 28, Solna, Centrum
Tel: 83.08.30
H-P Instrument AB
Idunagatan 28A
Goteborg
Tel: 27 68 00 and 27 68 01

SWITZERLAND
Max Paul Frey
Wankdorffeldstrasse 66, Berne
Tel: (031) 42.00.78

TAIWAN (FORMOSA)
Hwa Sheng Electronic Co., Ltd.
21 Nanking West Road, Taipei
Tel: 4 6076, 4 5936

TURKEY
TELEKOM Engineering Bureau
P.O. Box 376—Galata, Istanbul
Tel: 49.40.40

UNITED KINGDOM
Hewlett-Packard Ltd.
Dallas Rd., Bedford, England
Tel: Bedford 68052

VENEZUELA
Citec, C. A.
Edif. Arisan-Of #4
Avda. Francisco de Miranda-Chacaito
Apartado del Este 10.837, Caracas
Tel: 71.88.05

YUGOSLAVIA
Belram S.A.
83 Avenue des Mimosas
Brussels 15, Belgium
Tel: 35.29.58

For Sales and Service Assistance in Areas Not Listed Contact:

IN LATIN AMERICA
Hewlett-Packard Inter-Americas
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Telephone: (415) 326-7000
TWX: 910-373-1267
Telex: 033811 Cable: HEWPACK

ELSEWHERE
Hewlett-Packard
Overseas Sales Department
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Telephone: (415) 326-7000
TWX: 910-373-1267
Telex: 033811 Cable: HEWPACK

MANUAL BACKDATING CHANGES

Model 200CD

WIDE RANGE OSCILLATOR

Manual Serial Prefixed: 605-

-hp- Part No. 200CD-903

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.

Instrument Serial Prefix	Make Manual Changes
Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8
005-	3, 4, 5, 6, 7, 8
103-	4, 5, 6, 7, 8

Instrument Serial Prefix	Make Manual Changes
129-	5, 6, 7, 8
212-	6, 7, 8
229-	7, 8
333-	8

CHANGE #1

Change V1 and V3 to 6AC7 tubes, -hp- Part No. 1923-0014. The following partial schematic shows these tubes and their connections.

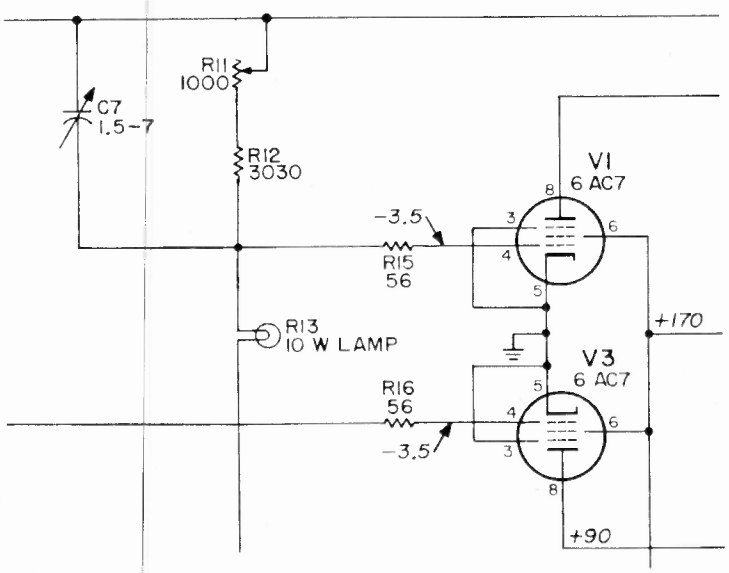

CHANGE #2

Delete C17 and C18 below serial 3637.

Change R11 to 1000 ohm rheostat, -hp- Part No. 2100-0036 and R12 to 3000 ohms, -hp- Part No. 0689-3025.

The following partial schematic shows the electrical connections.

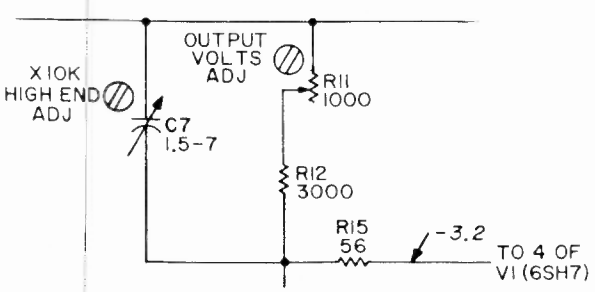

Manual Changes Model 200CD Page 2

Instrument Serial Prefix	Make Manual Changes
Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8
Serials 904 thru 22529	2, 3, 4, 5, 6, 7, 8
005-	3, 4, 5, 6, 7, 8
103-	4, 5, 6, 7, 8

Instrument Serial Prefix	Make Manual Changes
129-	5, 6, 7, 8
212-	6, 7, 8
229-	7, 8
333-	8

CHANGE #3

Change V1 and V3 to 6SH7 tubes, -hp- Part No. 1923-0036.

Change V2 and V4 to 6AU5 tubes, -hp- Part No. 1923-0020.

The following schematic shows electrical connections.

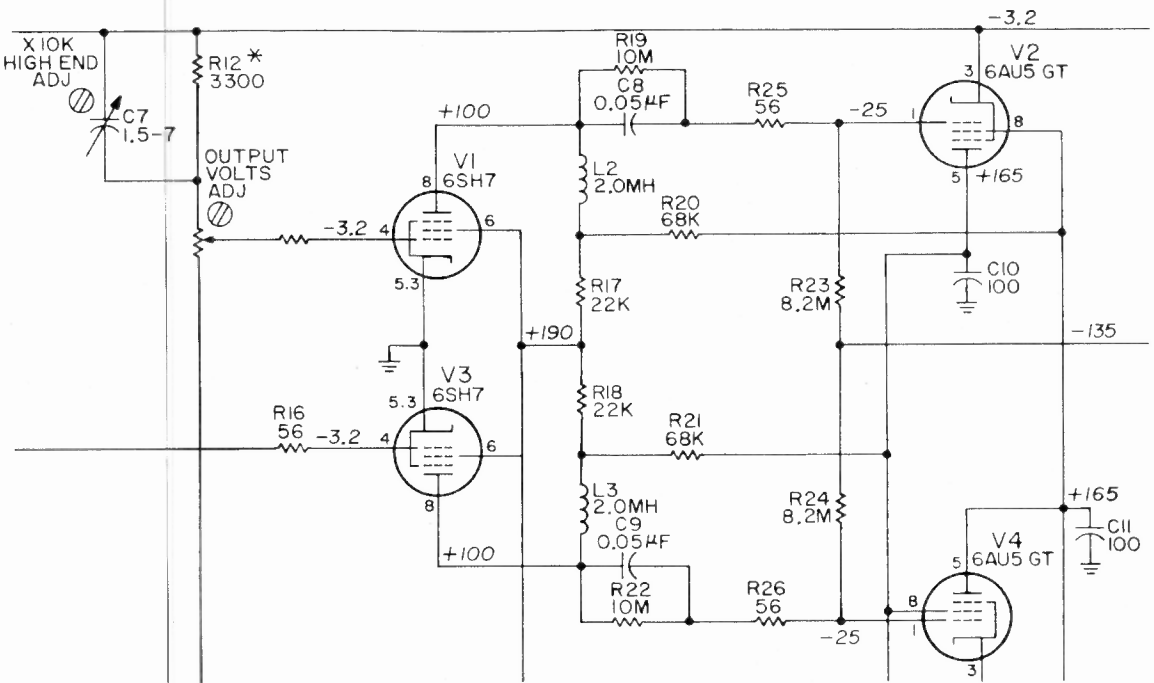

5AR4 tube is interchangeable with 5Y3 in the power supply.

Delete R51, hum adjust and R50, Dynamic Bal. Adj.

CHANGE #4

Change R50 to 250 K ohms, -hp- Part No. 2100-0175, connected between R23 and R24.

Change R30, 31 to resistors, matched pair, 2500 ohms each matched to within 1%, -hp- Part No. 200J-26.

Delete R35 and 36.

Partial schematic shows change in this circuit.

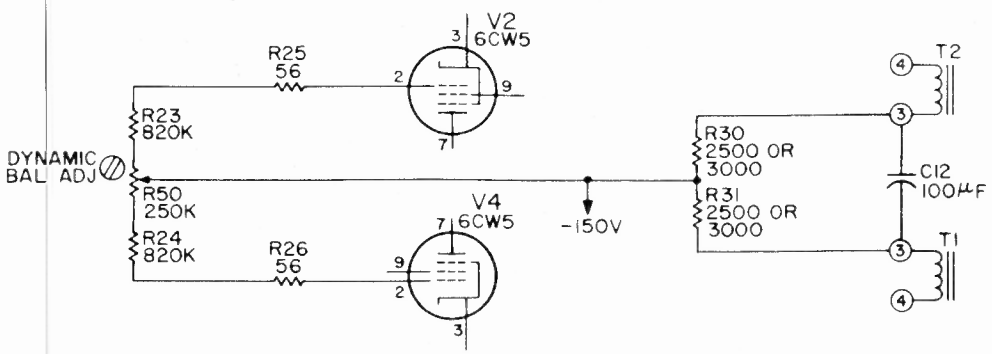

Manual Changes Model 200CD Page 3

Instrument Serial Prefix	Make Manual Changes
Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8
005-	3, 4, 5, 6, 7, 8
103-	4, 5, 6, 7, 8

Instrument Serial Prefix	Make Manual Changes
129-	5, 6, 7, 8
212-	6, 7, 8
229-	7, 8
333-	8

CHANGE #5

Change R23, 24 to resistor: fixed, composition, 820,000 ohms ±10%, 1/2 w, -hp- Part No. 0687-8241. (If amplitude oscillations occur expecially at high frequencies, use current value of resistors.)

CHANGE #6

Section VI Table 6-1, under Miscellaneous, and Table 6-2
Delete the following:

Disc Ass'y Vernier Drive, -hp- Part No. 5040-0607; Mfr. 28480; TQ, 1
Bearing Capacitor Drive, -hp- Part No. 5020-0618; Mfr. 28480; TQ, 1
Spring Thrust, -hp- Part No. 5000-0637; Mfr. 28480; TQ, 1

Add the following:

Disc, vernier drive	5020-0236
Disc, vernier drive	5040-0211
Spring, compression	1460-0019

Spring only for replacement. For replacement of vernier drive, use current part numbers.

CHANGE #7

Section VI Table 6-1, under Miscellaneous, and Table 6-2
Delete the following:

Assembly, Gear, -hp- Part No. 5060-0020
Assembly, Gear, -hp- Part No. 5060-0021
Spring, -hp- Part No. 1460-0114

Add the following:

Gear Spur, -hp- Part No. 5020-0011
Assembly, Gear, -hp- Part No. 5020-0602
Spring, -hp- Part No. 624A-36B-5

Spring only for replacement. For replacement of gears, use current gear assembly.

ALL

Proper Range Switches for All Serials

Instrument Serial No.	Range Switch (-hp- Part No.)
1 thru 833	200CD-19W
834 thru 853	200CD-19WA
854 thru 903	200CD-19W
904 thru 3637	200CD-19WA
3638 and above	200CD-19WB

Proper Output Transformers for All Serials

Instrument Serial No.	Output Transformer (-hp- Part No.)
1 thru 833	T_1 is 9120-0011, T_2 is 9120-0010#
834 thru 853	T_1 is 9120-0015, T_2 is 9120-0016#
854 thru 903	T_1 is 9120-0011, T_2 is 9120-0010#
904 thru 3637	T_1 is 9120-0015, T_2 is 9120-0016#
3638 and above	T_1 is 200CD-9, T_2 is 9120-0016

There are some exceptions. If R37 and R38, on the range switch, are 100 ohms, use 9120-0010; if R37 and R38 are 200 ohms, use 9120-0016.

Manual Changes Model 200CD Page 4

Instrum Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8	129-	5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8	212-212-	6, 7, 8
005-	3, 4, 5, 6, 7, 8	229-	7, 8
103-	4, 5, 6, 7, 8	333-	8

CHANGE #8

Section VI and Figure 5-9
Delete CR1 and CR2.

Change T3 power transformer to -hp- Part No. 9100-0036.

Add the following:

V5, Tube, elect, 5AR4, -hp- Part No. 1930-0003.
XV5, Socket, tube, octal, -hp- Part No. 1200-0020.

Change Table 1-1, Specifications, to the following:
DISTORTION: Less than 0.5% below 500 kc; less than 1%, 500 kc and above. Independent of load impedance.

The following partial schematic shows Power Supply changes

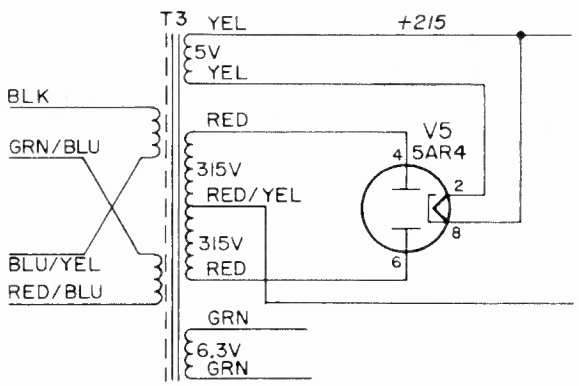

200CD-903

PRINTED IN U.S.A.